

How to refill defects with E-Z Flow™ stick, electric knife and Wool-Lube® rubbing lubricant

The following instructions describe how to touch up and repair the most common damages furniture.

Procedure:

- Damaged area must be clean and free of dirt. Use a blade or sandpaper to remove any loose fibers.
- Choose the closest colour E-Z Flow™ stick. Melt enough E-Z Flow™ stick on the hot blade of the Burn-in knife to slightly overfill the damage. **Fig. 1**
- Allow the melted stick material to flow into the damage, overfilling slightly. **Fig. 2**
- Wipe any excess carefully from the blade with a clean cloth. **Fig. 3**
- Apply Burn-in Balm™ paste generously to the area surrounding the repair.
- Use the hot knife blade to level the E-Z Flow™ stick fill. **Fig. 4A+4B**
- Wipe blade clean between passes. **Fig. 4C**
- When fill is very close to level with surrounding surface, wipe the balm from the repair area.
- Wrap 600 Wetordry™ sandpaper around a rubber sanding block. Apply liquid Wool-Lube® rubbing lubricant to the paper and lightly sand the fill until completely level. **Fig. 5+6**
- Wipe the area dry and apply a seal directly over the burn-in fill using an E-Z Seal™ pen. Allow to dry 4 - 5 minutes.
- Sand very lightly with 600 sandpaper (dry). **Fig. 7**
- Apply a coat of aerosol Clear Sanding Sealer and let dry.
- Sand lightly and remove dust.
- Apply grain using Graining Pen of the proper colour.
- Apply the correct sheen of a clear aerosol finish (Clear Toner, Ultra Classic™ toner, Precatalysed Aerosol Lacquer or Finisher's Choice™ lacquer.)

Fig. 1

Fig. 2

Fig. 3

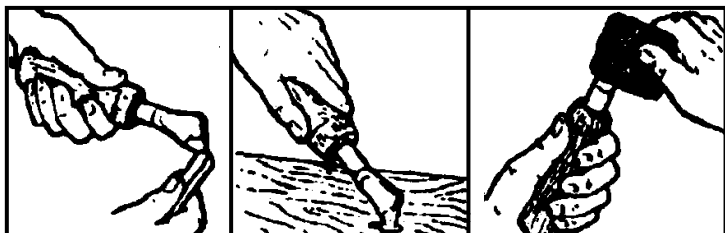


Fig. 4

Fig. 5

Fig. 6

Fig. 7

