

Furniture Light

Model: WLA-S03-DC

1. Description


4 step dimmer switch, used for LED tape light.


2. How to use and 4 level in brightness

Touch : ON \rightarrow 25% \rightarrow 50% \rightarrow 75% \rightarrow 100% \rightarrow OFF



3. Dimension

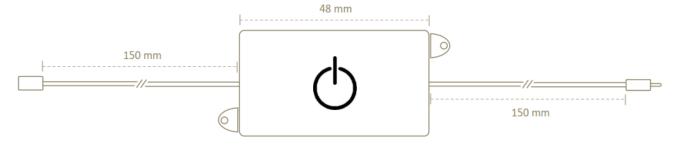

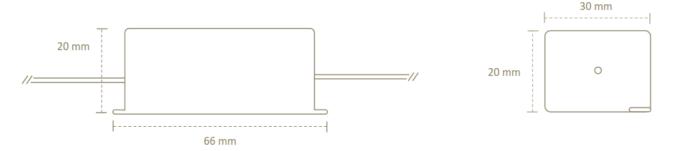

4. Installation

Surface mounted by foam tape

- 1) There is a foam tape on the back of 4 step dimmer switch.
- 2) Tear the paper of foam tape and put the 4 step dimmer switch on the surface.

Surface mounted by screw

- 1) There are screw ears on the two sides of 4 step dimmer switch.
- 2) Locate the 4 step dimmer switch on the correct position and screw on to fix it well.

5. Parameter

Dimension: 48mm(L.)*30mm(W.)*20mm(H.)

INPUT: 15CM WIRE + DC3.5*1.0 FEMALE JACK; OUTPUT: 15CM WIRE + DC3.5*1.0 MALE JACK

Working wattage: 24V-48W(max.) / 12V-24W(max.)

Accessory: 1pc foam tape on the back of 4 step dimmer switch