
<u>Panasonic</u>

Owner's Manual

Ceiling Mount Clothes Drying System Model No. CWFE12ECM

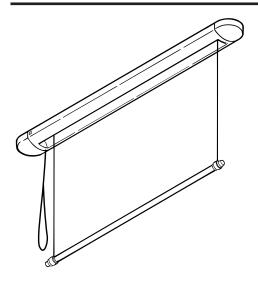

Thank you for purchasing the Ceiling Mount Clothes Drying System.

- Please read this Owner's manual carefully and make sure you use this indoor Ceiling Mount Drying Rack in a proper and safe manner.
- Please make sure that you read the "Safety Precautions" before use.
- Please make sure that information such as "delivery date/store name" is filled out in the warranty section. Keep it together with these instructions.
- This product is intended for indoor use in residential households.
- Please refrain from using this product outdoors or in areas such as the bathroom where the product may come into contact with water.
- Installation work of this product should not be done by yourself. The work should be done by a construction company. (Improper installation may cause injury due to falling.)

To the store/contractor:

Please give these instructions to the client after installation.

Safety Precautions

Please follow these instructions

This section explains the precautions to take in order to prevent injuries to people or damage to property.

■ Each of these explains what harm and damage may be incurred by incorrect use.



■ The following symbols explain what you may and may not do. (The following are examples of these symbols)



WARNING

Indicates a risk of death or severe injuries.



CAUTION

Indicates a risk of minor injuries or damage to property.



What you may not do



What you must do

WARNING

· No one is allowed to disassemble, repair, or modify this product, except repair



Do not disassemble engineers.

A fall may cause injuries or damages.





Forbidden

· Do not dry laundry by placing a heater or any other heat source near or beneath this product.




It may cause a fire.




 Special attention should be paid when handling the pull cord.

The pull cord can be a hazard to children. Keep the pull cord out of the reach of children and prevent children from climbing on furniture to reach the pull cord.

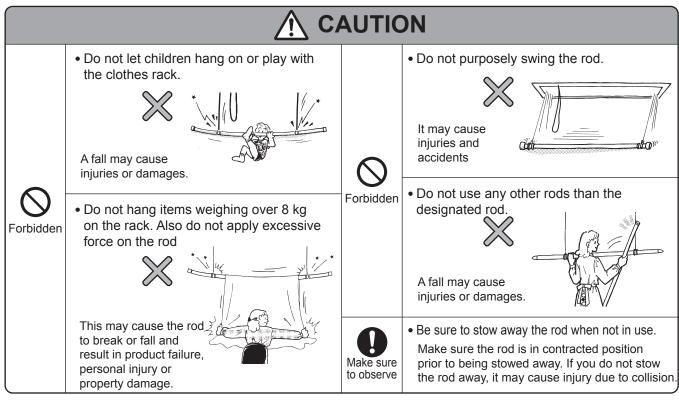


Names of each part

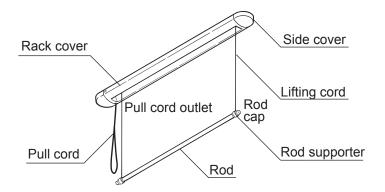

Instructions for use


1. How to pull down the cord

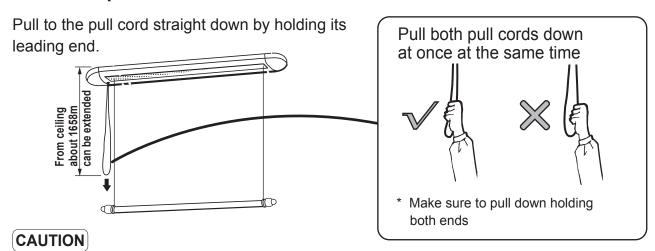

- Do not jump at or pull the cord. (It may cause damage.)
- Please move the rod up or down by pulling the cord completely. (It may cause the cord to get entangled.)

2. How to move the rod up and down

With the pull cord hanging down, pull down the "downwards" end to make it descend and pull down the "upwards" end to make the rod ascend. While the pull cord is pulled down, pull the one side of the cord downwards and upwards to make the rod ascend or descend and after pulled down pull the one side of the cord downwards and upwards to make the rod ascend or descend.

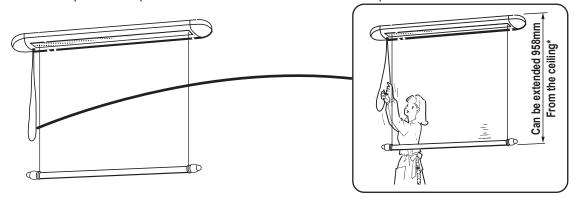

Precautions for use

- Ensure extension rod is fully contracted before storing the rod and closing the lid. It may cause damage.
- Do not pull the cord further than necessary when rod is fully extended. It may cause damage.
- Do not lower the rod more than 958mm forcibly. It may cause damages.
 - * If lowered more than 958mm stopper mechanism will activate and gear will spin around.

 
- Please do not pull the cord diagonally, it may cause the rod to be uneven and the cord to tangle. It may cause damage.
- Do not lift the rod forcibly when rod is stuck to any obstacle. (lifting cord slack) It may cause damage.
 - * Ensure rod is clear of any obstruction prior to raising, lowering or storing it.

3. How to extend and contract the rod

- (1) Loosen the cap by turning it in the direction of the arrow.
- (2) Hold the cap and pull out the extension rod.
- (3) Turn the cap in the opposite direction to tighten the extension rod in place.
- (4) To contract the extension rod, perform the same procedure in the reverse order.
- (5) Ensure extension rod is full contracted before storing the rod
- * When fastening, perform the same procedure in the reverse order.

4. How to hang laundry

CAUTION • Please spin-dry laundry adequately and hang it evenly on the rack. (* Hanging clothes with a wide shoulder width may lead to a contact with the curtains. Please be careful.)

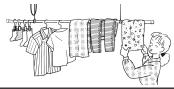

Please avoid putting a load on just a part of the rod.

It may cause damage.



Please do not hang laundry weighing 8kg or more (after spin-dry)

It may cause damage.



Estimated amount of laundry of a family of 4


(Approximately 6kg Sweaters: 3 pcs Casual shirt: 1 pc Bath towels: 2 pcs Socks: 4 pcs T-shirts: 3 pcs Cotton pants: 2 pcs Underwear: 4 pcs after spin-dry) Towels: 2 pcs

* Note: Laundry after spin-drying typically is approximately 1.3 to 1.5 times heavier than it is when dry.



5. How to remove the rod

 Remove the rod by removing the rod supporter cap of rod support (downside)

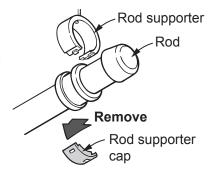





Make sure to observe

• In order to reattach the rod, attach rod supporter cap to the rod support firmly.

If not attached firmly the rod may fall and cause injury.

Care

If the rack and/or the rod gets dirty...

- Wipe clean with a damp cloth and a solution of mild detergent, then remove all moisture with a dry cloth.
- * Do not clean with benzine or thinners, etc. (It may cause deformation or fading.)
- If it comes into contact with chemicals, please remove them immediately. Depending on the type of chemical and the length of exposure, color fading may occur.



In case of malfunction

In case of malfunction, stop using and contact your dealer.

| Situation | Possible causes | Solution |
|---|---|--|
| The rod will not descend. | Are you sure the rod did not come into contact with any obstacles? (This includes stowing away the rod with one end extended.) If the cord slacks, the anti-obstacle mechanism gets activated and the cord stops working. | Please remove the obstacles. While removing the slack from the cord, pull it up or down. |
| The rod can descend, but it cannot ascend. | Are you sure the weight of the laundry did not exceed the limit? | Please make sure the laundry does not weigh more than 8kg. |
| The pull cord does not work. | The anti-obstacle mechanism is activated and the cord does not work. | While removing the slack from the cord, pull it up or down. |
| The pull cord is pulled down and does not work. | The pull cord is entangled. | Please insert a screwdriver or a similar instrument into the outlet of the pull cord and push in the entangled cord. Pushing in |

About the length adjustment of the pull cord

The reach of the going up and down of the cord of this product can be adjusted. When adjusting the pull cord, please consult a contractor. (You can find the details in "Installation Manual")

CAUTION The Ceiling Mount Clothes Drying System should only be installed by a qualified Contractor/Installer.

This product is intended for the sole purpose of drying laundry.