




Assembly and mounting instructions for the ChopShop Saw Hood



1 Remove ChopShop Saw Hood and aluminum poles from box.



2 Insert the aluminum pole in the peacock tail and tighten knob.

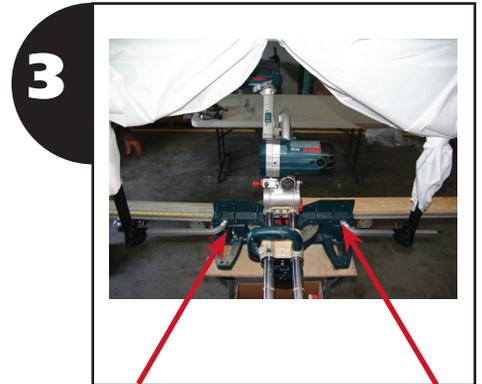


3 Insert 1/2" roll pipe into accessory holes in mitre saw. Some accessory holes are 1/2" or 5/8" in diameter. If there is a little movement this should not be a problem.



4 Unstrap the 3 Velcro hood wraps and let the saw hood fall into position.



5 We recommend that you place a trash can or box under the ChopShop Saw Hood, which allows the dust and debris to collect in one spot.

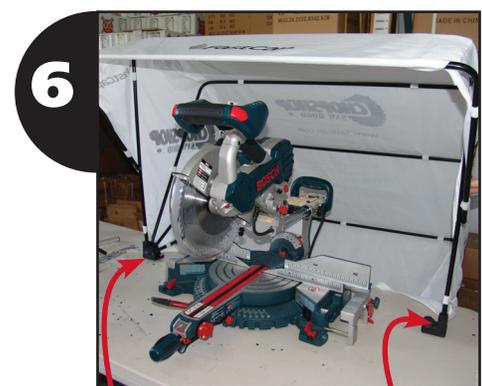

6 You can also mount the ChopShop Saw Hood to a table. Two mounting holes on each peacock tail will accept standard wood screws.



Some small modifications to the Saw Hood may be necessary, allowing it to fit into the accessory mounting holes on each individual saw. These modifications are generally limited to:

1. Grinding a corner off the aluminum mounting arm where the round 3" post attaches.



2. Making a bushing out of a 1/2 copper pipe allowing the 3" mounting post to fit into the larger diameter accessory holes.





Assembly and mounting instructions for Tile Clamp accessory



To use Tile Clamp accessory:

- Drill holes into the stand or table with the drill bit that is included. Use at least two of the screws that are included with each clamp to secure it in place (C).
- Adjust accessory hole (A) to an upright position and clamp down using handle (B).
- Now, simply place the ChopShop Saw Hood accessory rods (D) into the accessory hole on tile clamp. Now you are ready to go.