
2002CPDL SERIES


POCKET DOOR LOCK INSTALLATION TEMPLATE 2-3/4 Backset

Note: All Dimensions Reflect Suggested Mortise Prep Dimensions. (Actual Lock Dimensions Are Slightly Smaller).



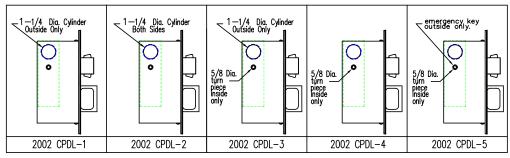

Find Catalog Numbers Which Will Show Cutouts For Functions Desired.

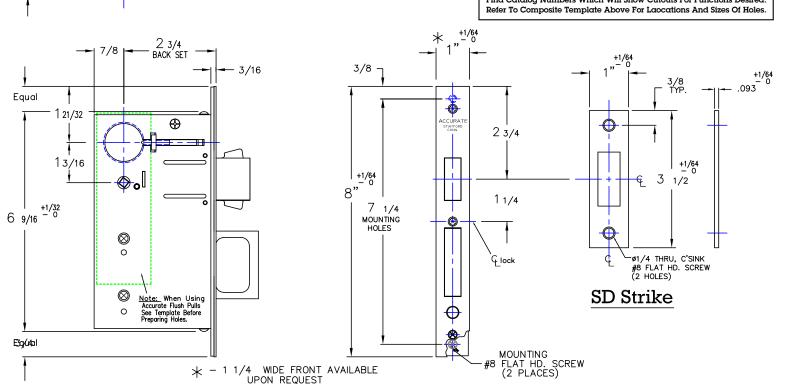

Template #2002CPDL

Richelieu Hardware Ltd | info@richelieu.com 7900 Henri-Bourassa West, Saint-Laurent, QC H4S 1V4 | (Canada) 1 800 361-6000 | US 1 800 619-5446

