




Installation Instructions

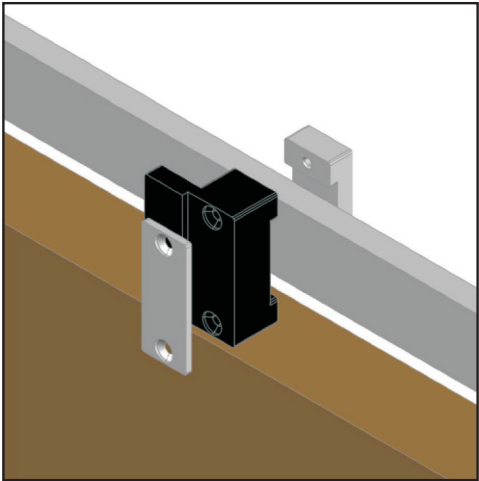

- STEP 6**
Install stoppers
- Install the door stoppers on the left and right ends of the running rail.
 - **WARNING :**
To prevent sliding door from sliding off the running rail during installation.

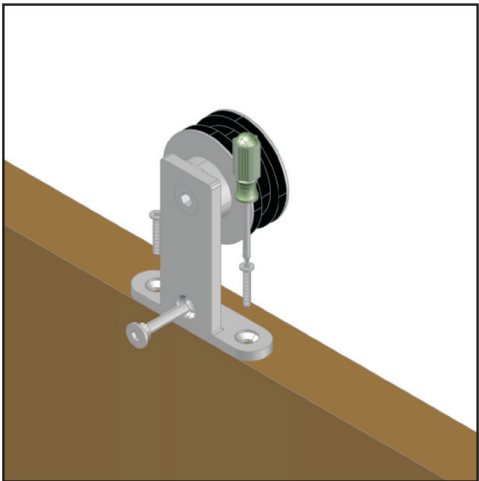


- STEP 7**
Fastening the roller carriage
- Before installing the roller carriage on your wood door, be sure to outline the correct position and pre-drill your holes.
 - Fasten the roller carriage onto your wood door using the enclosed screws. Tighten the screws by hand.

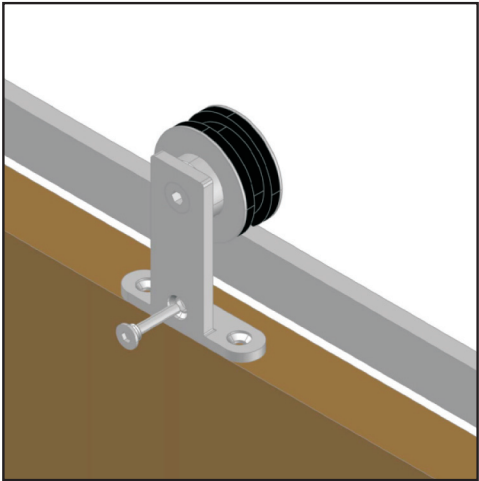


- STEP 8**
Hanging the panel and fastening the lift-locking device
- Hang assembled sliding door onto the running rail.
 - **FOR SECURITY REASONS:** put plastic wedges under the sliding door panel and ensure 7mm spacing.
 - **PAY ATTENTION TO THE PREVIOUSLY INSTALLED FLOOR GUIDE!**
 - Re-fasten the lift-locking device on the roller carriage.
 - **WARNING :**
Do not leave any space between the lift-locking device and the running rail!
 - Remove plastic wedges.


Installation Instructions

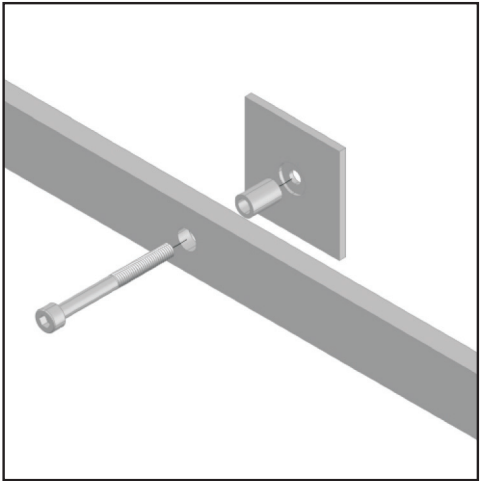

- STEP 3**
Fasten running rail on wall
- Fasten both extremities of the running rail on the wall with the back plate and sleeve using the enclosed fastening devices.

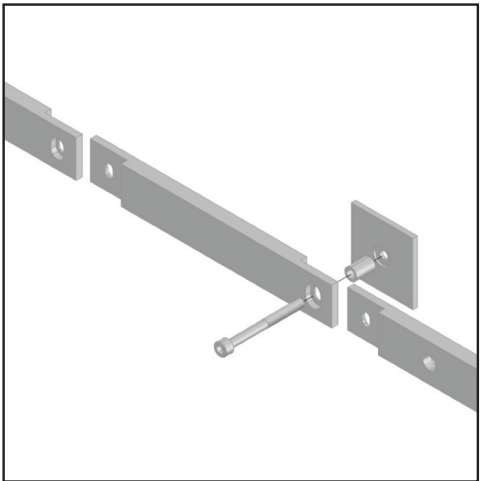

- STEP 4**
Fasten running rail connector if installing a door 34" - 48"
- Join both extremities of the running rail and connector together with the back plate and sleeve using the enclosed fastening devices.
 - **WARNING :**
If you have bought ADDITIONAL ITEM 1, you will have 2 connectors to install.

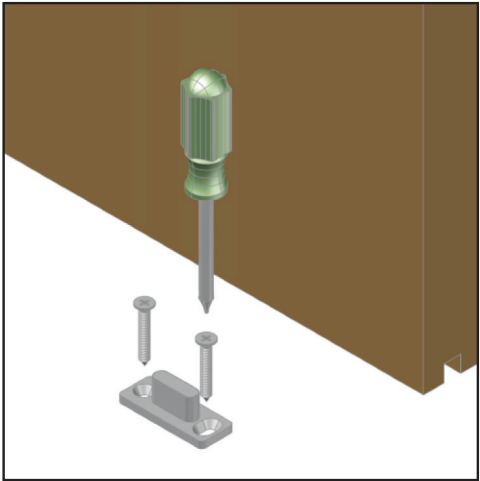


- STEP 5**
Fasten floor guide
- Fasten floor guide on floor using enclosed fastening devices and according to technical detailed drawing.
 - **WARNING :**
The door leaf should run parallel to the wall and be positioned at the desired distance from the wall.




Installation Instructions

(8916603170 & 891660390)


Installation Instructions

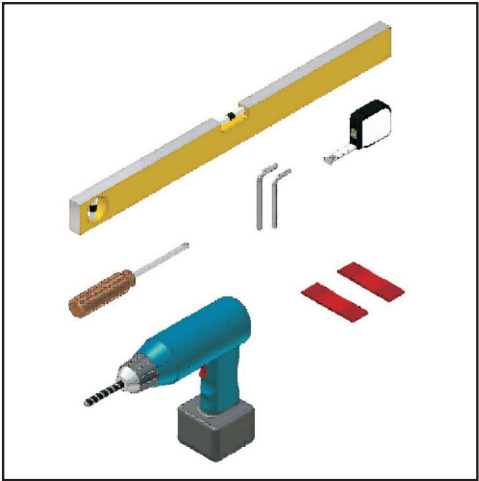

- You need**
- Spirit level
 - Measuring tape/foot rule
 - Power drill
 - 8 mm/10 mm drill bit for stone
 - Phillips screwdriver
 - Allen key set
 - Plastic wedges
- Please see safety instructions on power drill before starting assembly.

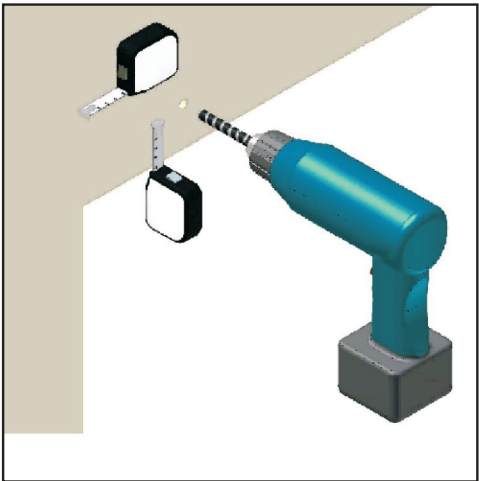


- STEP 1**
First wall drilling
- Drill hole for exterior fastening of running rail on wall according to detailed drawing.

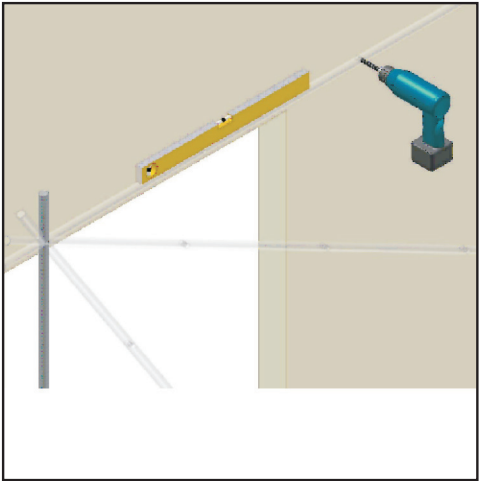

- STEP 2**
Remaining wall drillings
- «Loosely» screw on the exterior end of the running rail. Using the spirit level, ensure the running rail will be horizontally straight and use it as a drilling jig to pre-drill the fastening holes with an 8 mm drill bit. Drill the holes for the screw anchors with a 10 mm drill bit.

8916603170 & 891660390 TOP MOUNT HANGER SLIDING DOOR KIT

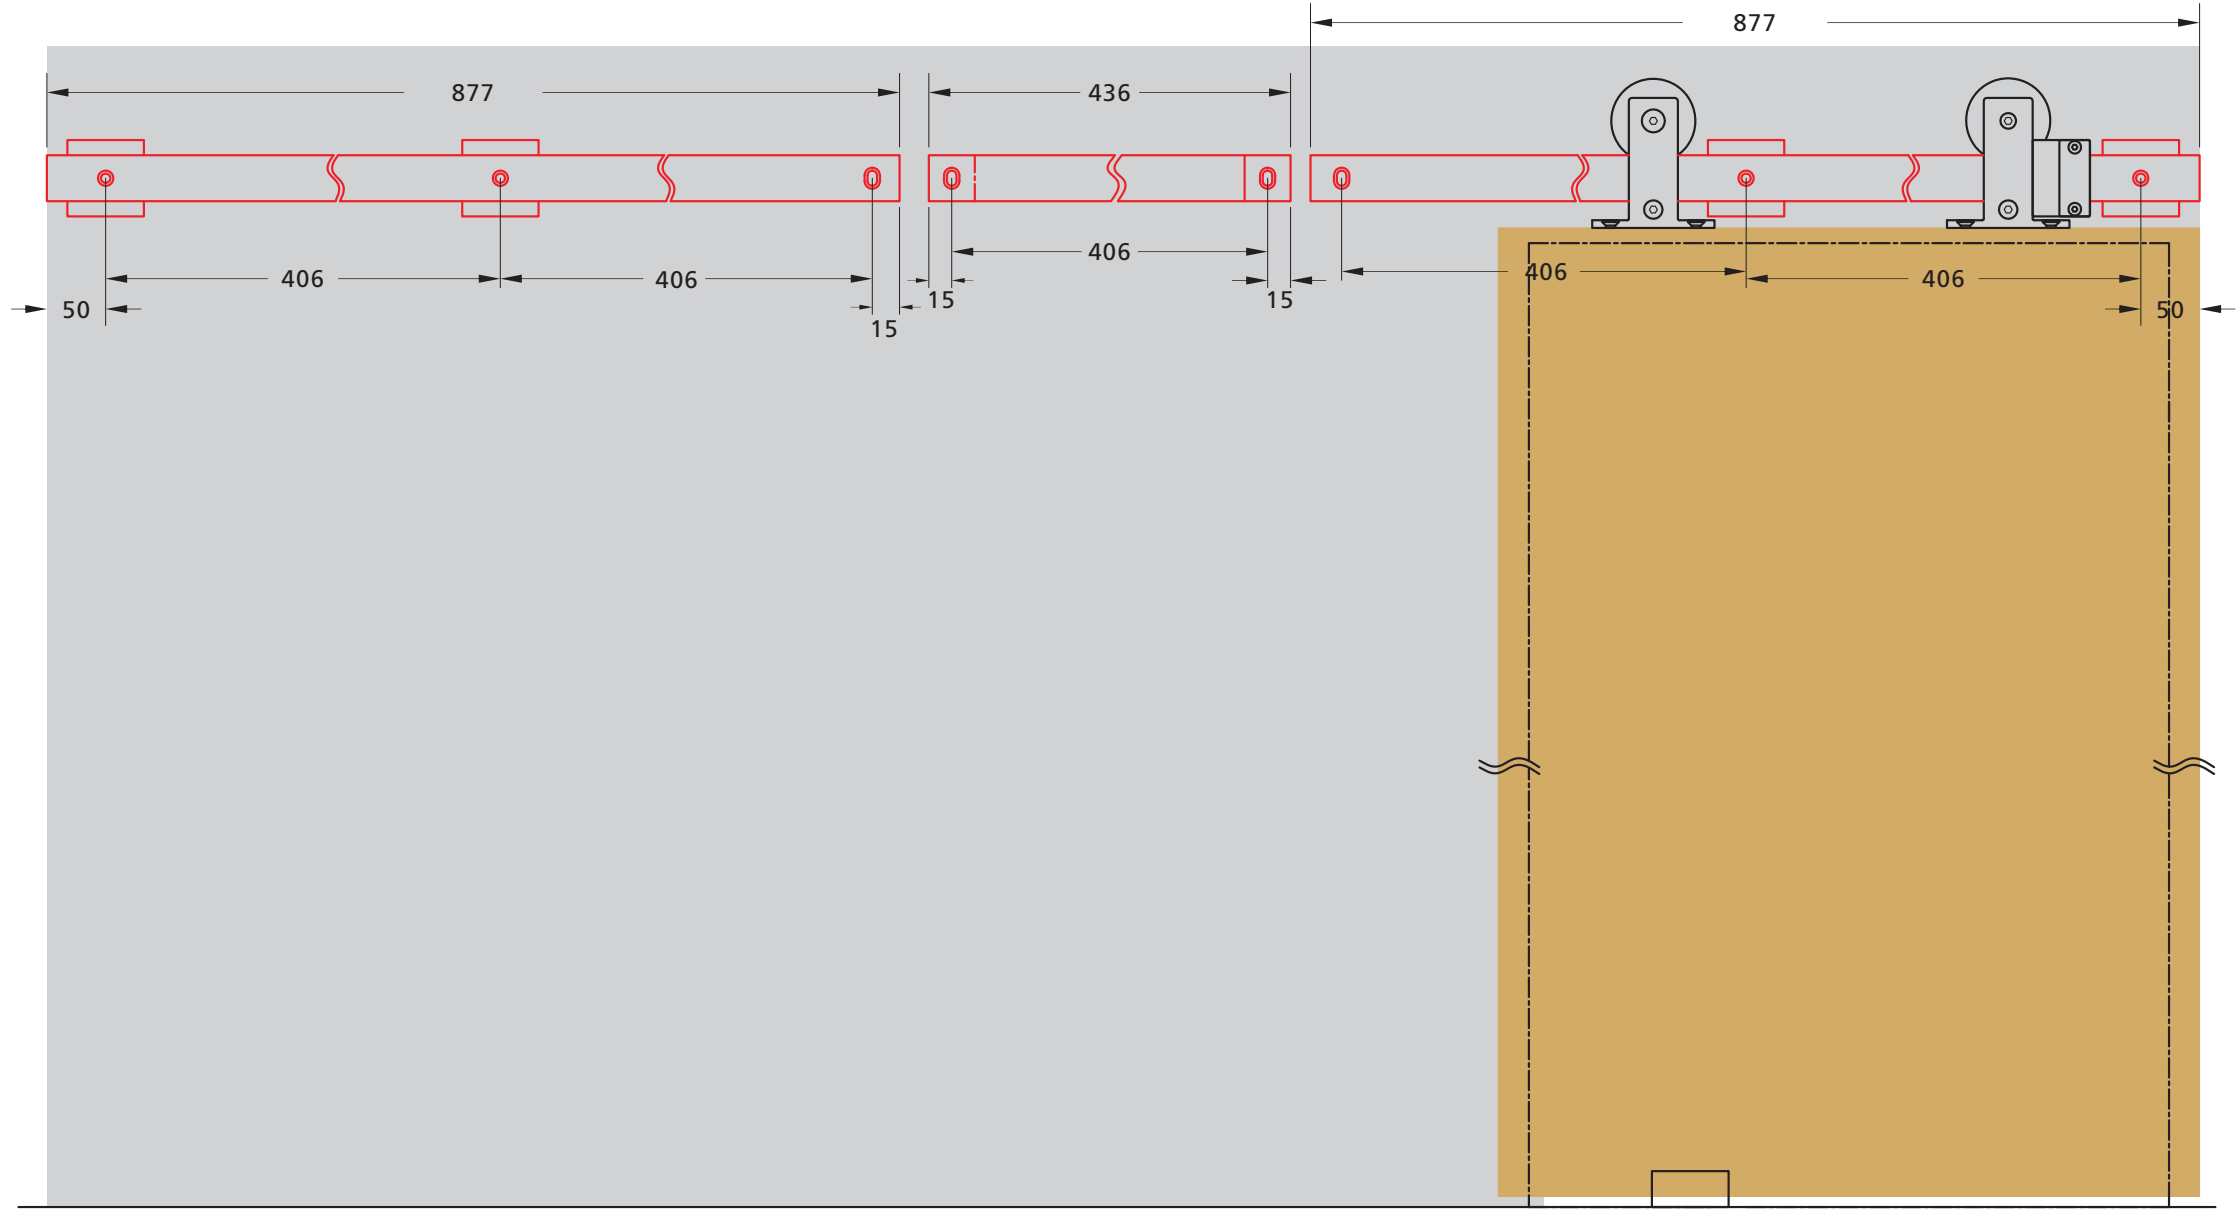

PARTS LIST (FOR 1 DOOR KIT)

Sliding door roller
x 2 pcs



Wall Bracket
x 5 pcs



Door Stopper
left side x 1 pc
right side x 1 pc



10 x 30 mm rail (877 mm long)
left side x 1 pc
right side x 1 pc



Floor Guide
x 1 pc



Sleeve
11 mm long x 5 pcs
15 mm long x 5 pcs
26 mm long x 5 pcs



Rail to wall screw
(M6x100mm long)
x 5 pcs



Hex Key
x 1 pc



ADDITIONAL ITEM 1

(Item: 89166011170 & 8916601190)

10 x 30 mm rail middle
connector x 1 pc
(436 mm long)



Wall Bracket
x 1 pc



Sleeve (Dia 9.8mm)
11 mm long x 1 pc
15 mm long x 1 pc
22 mm long x 1 pc
26 mm long x 1 pc
32 mm long x 1 pc




Rail to wall screw
(M6x100mm long)
x 1 pc



ADDITIONAL ITEM 2

(Item: 89166012170SCSW or 8916601290SCSW)

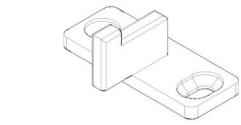

Soft Closer Activator
x 1 pc



M5x40mm
screw x 2 pcs



Soft Closer
x 1 pc

8916603170 & 891660390 TOP MOUNT HANGER SLIDING DOOR KIT

