


1



Measure the surface to be covered and calculate the number of panels necessary. Each panel measures approximately one square metre.

2

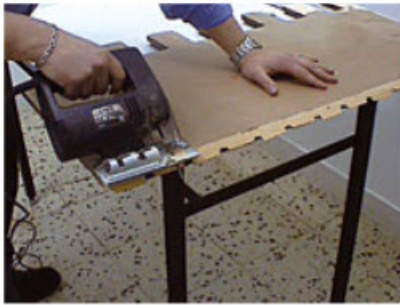

In the case of dovetailed panels, they will be squared by cutting one dovetailed end off.

3



Position the panel on the wall and drill through the panel and wall, preferably in the cavities between the bricks.

4



The previously joined screw and wall plug are inserted into the drilled hole and screwed until flush.

5



Fit the panels together. Due to their design, the insertion is perfect.

6



Fit, drill and screw all the panels covering the wall (No. 3, 4 and 5).

7



When the wall has been panelled, fill the joints and the drill holes with putty.

8



After filling the cavities with putty, smooth the joints with a fine paint brush.

9



When the putty has dried, paint the joints and holes to obtain an impeccable finish.