
Panel Configurations

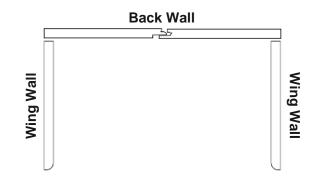

• Wing Wall Panels

- Postformed Edge + Flat Edge
 - The Bullnose Edge is perfect for wing wall or terminating walls.
 - Common market sizes of 30, 32, 34, and 36" panel widths



- Back Wall Panels
 - Tongue Edge + Flat Edge
 - The easy to handle TE/FE panels are ideal for a seamed back wall.
 - Common market sizes of 30" panel widths


Groove Edge + Flat Edge

- The easy to handle GE/FE panels are ideal for a seamed back wall.
- Common market sizes of 30" panel widths


• Flat Edge + Flat Edge

- The easy to handle FE/FE panels are best for a one-piece wall.
- Common market sizes of 34, 36, 42, 48, and 60" panel widths

Bath Configuration Samples

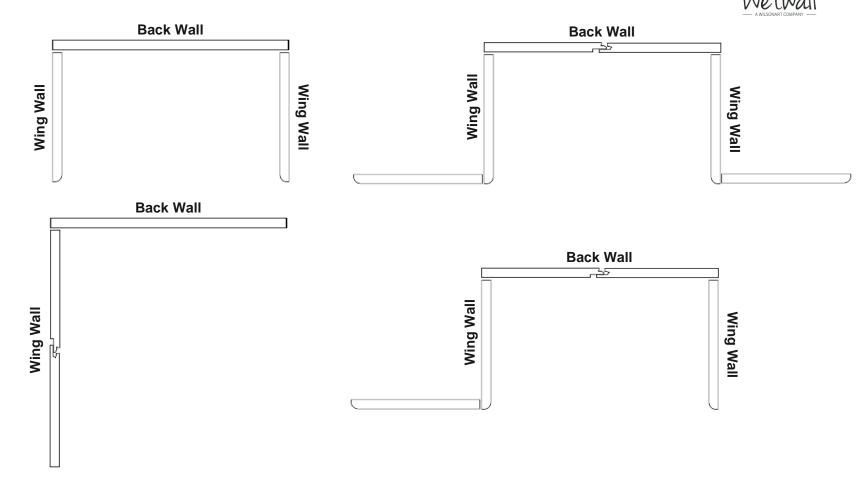

Bath/Shower Surrounds

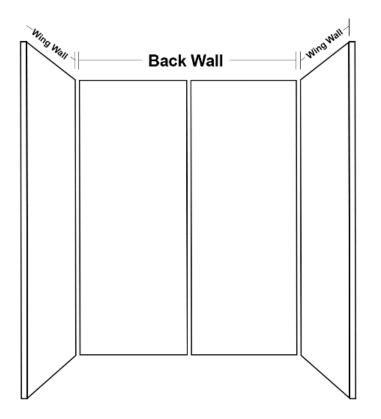

- Wing Wall Back Wall Height
 - 30″ • 32″
 - 34″
 - 36" • 42"

• 48″

Back Wall • F • 34″

• 36″

• 42″


• 48″

• 60″

- 60" • 72"
 - 80″
 - 96″

Bath/Shower Surrounds



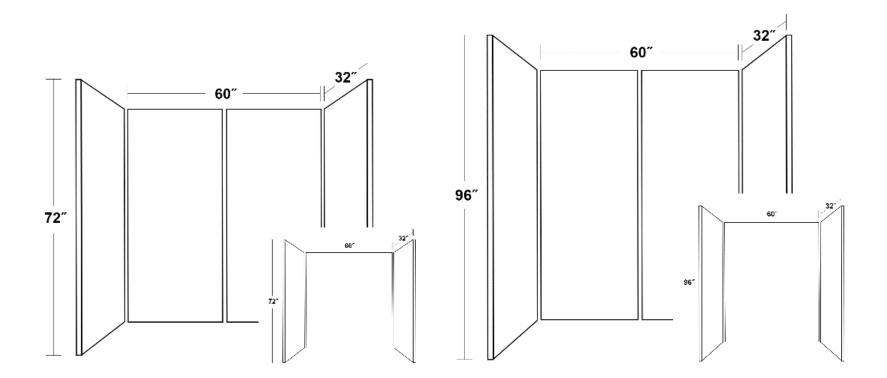

Bath/Shower Surrounds



