


BYRNE


INSTALLATION INSTRUCTIONS FOR PDC

Install data jacks as described in the installation instructions provided with data adapters, BE01421

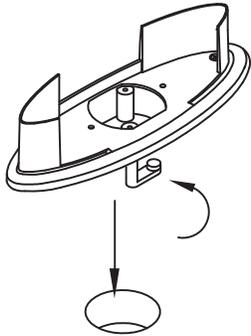



2-1/4" Hole

OR

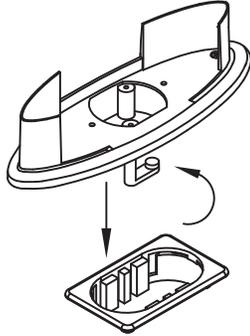


Byrne Rectangular Grommet


Rotate locking cams to prevent interference before inserting base into hole/grommet

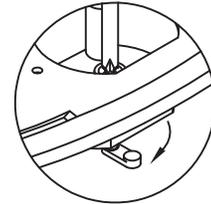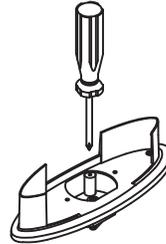


Use a phillips head screwdriver to tighten locking cams and secure PDC base into work surface.

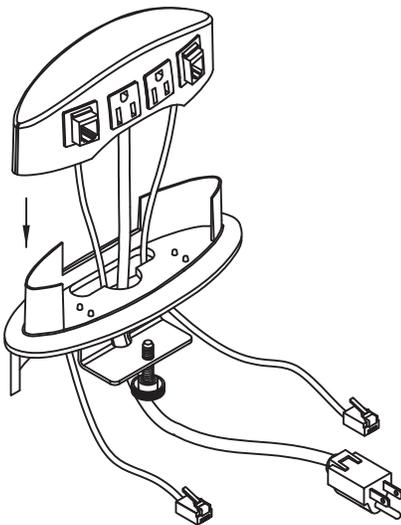

Insert the power and communication cords through PDC base.

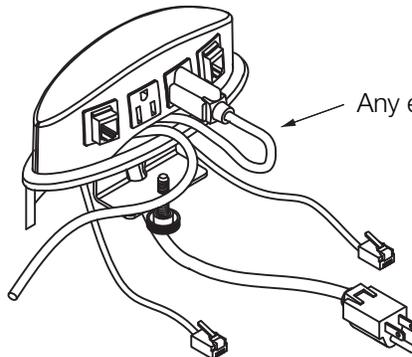

Snap the PDC housing into the base

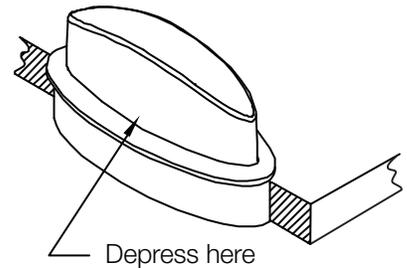

Slide the PDC onto work surface.

WIRING DIAGRAM (BE08486 only)

Black	—————	Hot
White	—————	Neutral
Green	—————	Ground

NOTE: To remove PDC from base, press on lower back of the housing.