

UPPER HOLES: RECOMMENDED DISTANCE FROM THE FLOOR 130 cm


129

187

TEMPLATE FOR EXTRACTABLE/ MOVABLE MIRROR ASSEMBLY



WARNING!
Before the assembly please double check that the mirror does not show imperfections or breaks. Should you find imperfections or breaks, please do not assemble the mirror and contact our office to ask for replacement

1. Fix the rail with the self tapping screw to the side of the wardrobe.
2. Proceed with the installation of the movable support to which the mirror is fixed. Insert the turned pin in the lower part of the mirror and screw with the corresponding washer in the upper part.

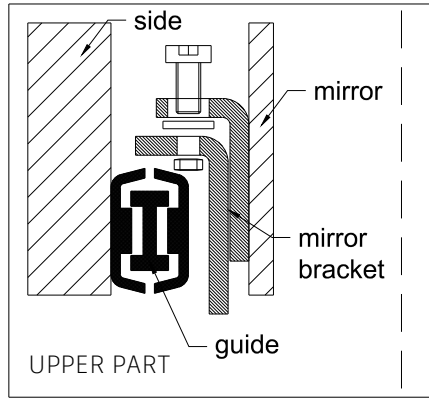

RECOMMENDED POSITIONING

3. The mirror is now ready to use; please stick the special plastic profile properly by closing the mirror to avoid accidental opening

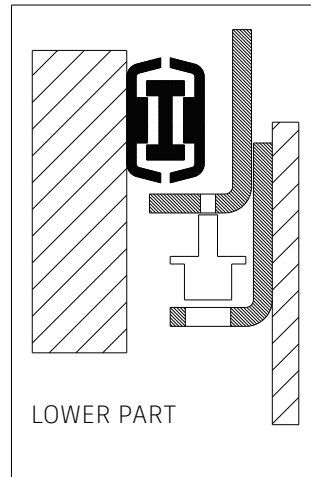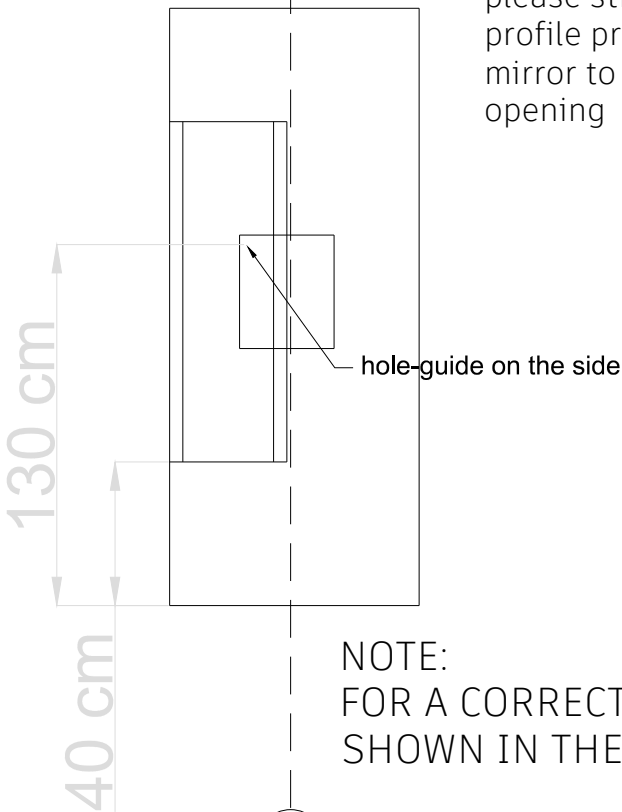

NOTE:
FOR A CORRECT ASSEMBLY, MOUNT THE FIXING PINS AS SHOWN IN THE PICTURE

129

187

UPPER HOLES: RECOMMENDED DISTANCE FROM THE FLOOR 130 cm

OUTER EDGE OF THE WARDROBE SIDE

478

130 cm

40 cm