



# VICE VERSA

ITEM # 8625I3GA-8625I3GB-8625I3GC-8625I3GD-8625I3GE

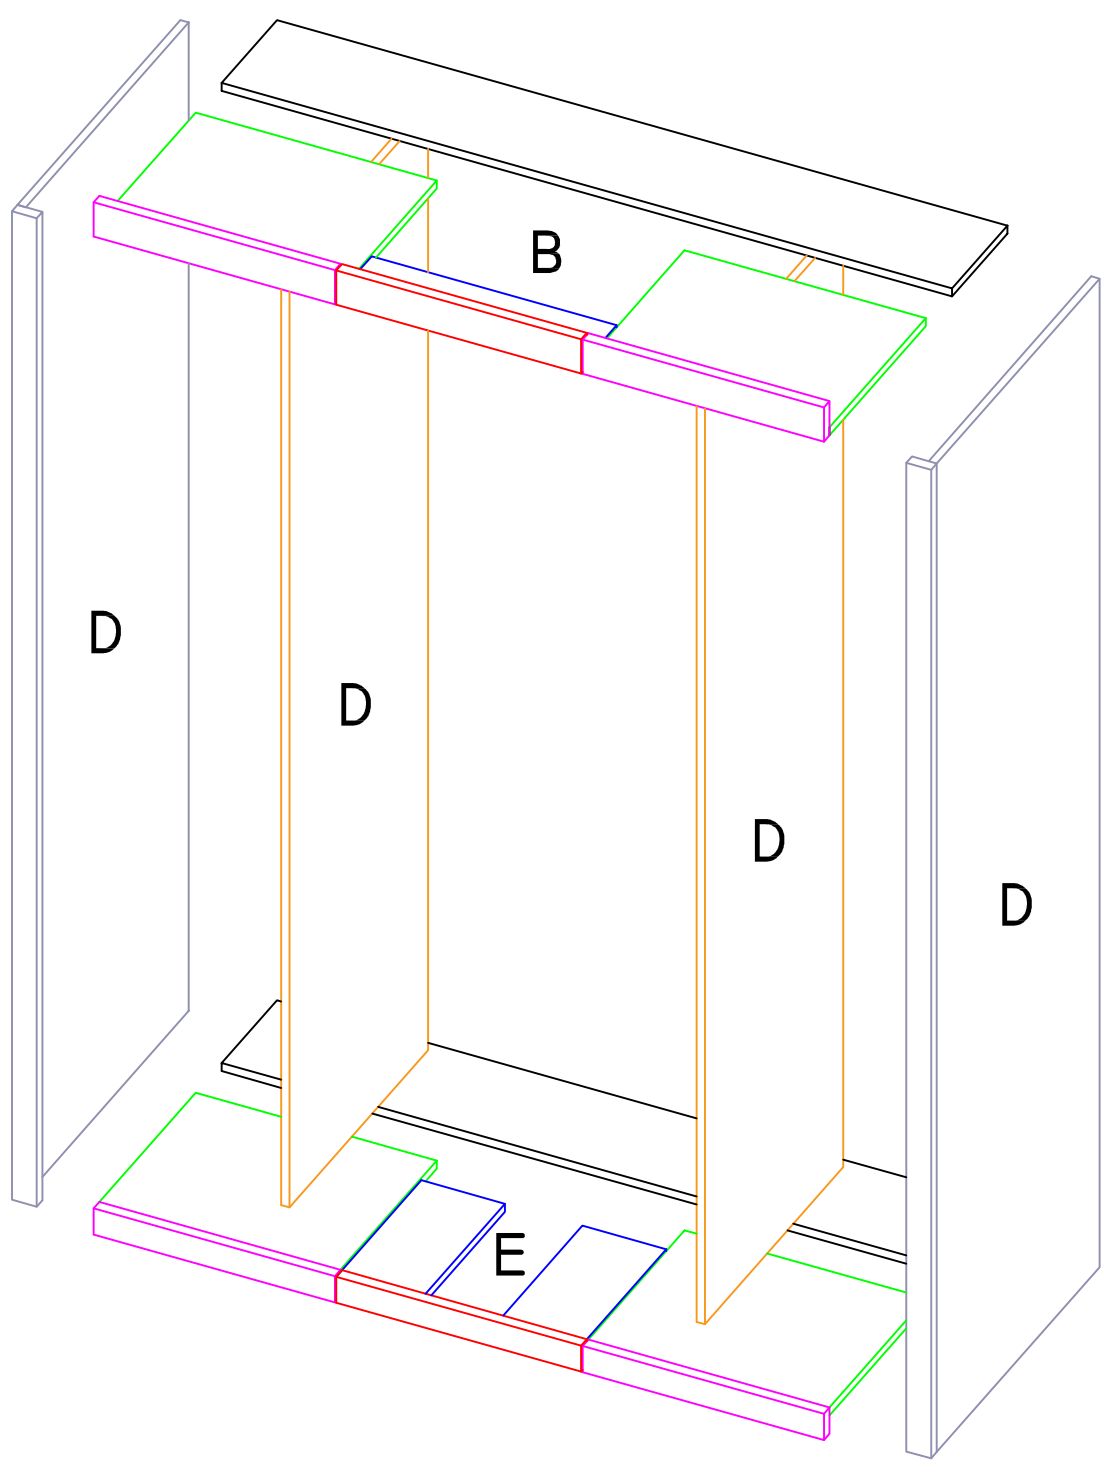

# WOOD PANEL HOLES & POSITION REFERRED TO ART. 8625I3GC

THE DEPTH INCLUDES:  
DOOR AND BACK PANEL

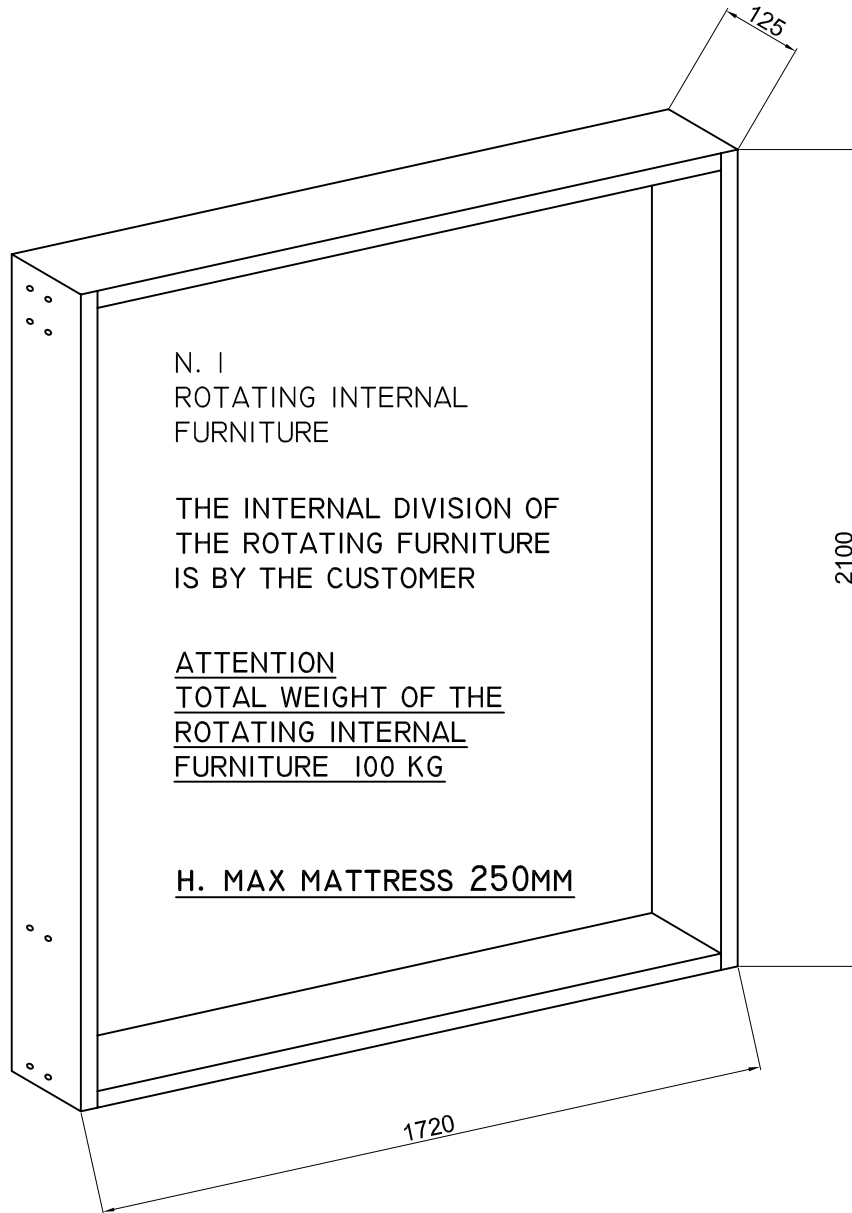

THICKNESS PANELS 16MM OR 19MM

THREADED BUSH 6MA  
(HOLES COUNTERSUCK Ø8 DEPTH 14MM)


**SCREWS  
BAG  
GC1**


N.16 THREADED BUSH 6MA





**6MA**

FOR FIXING THE CABINET USES:

· 16 x  **TP 6x15**

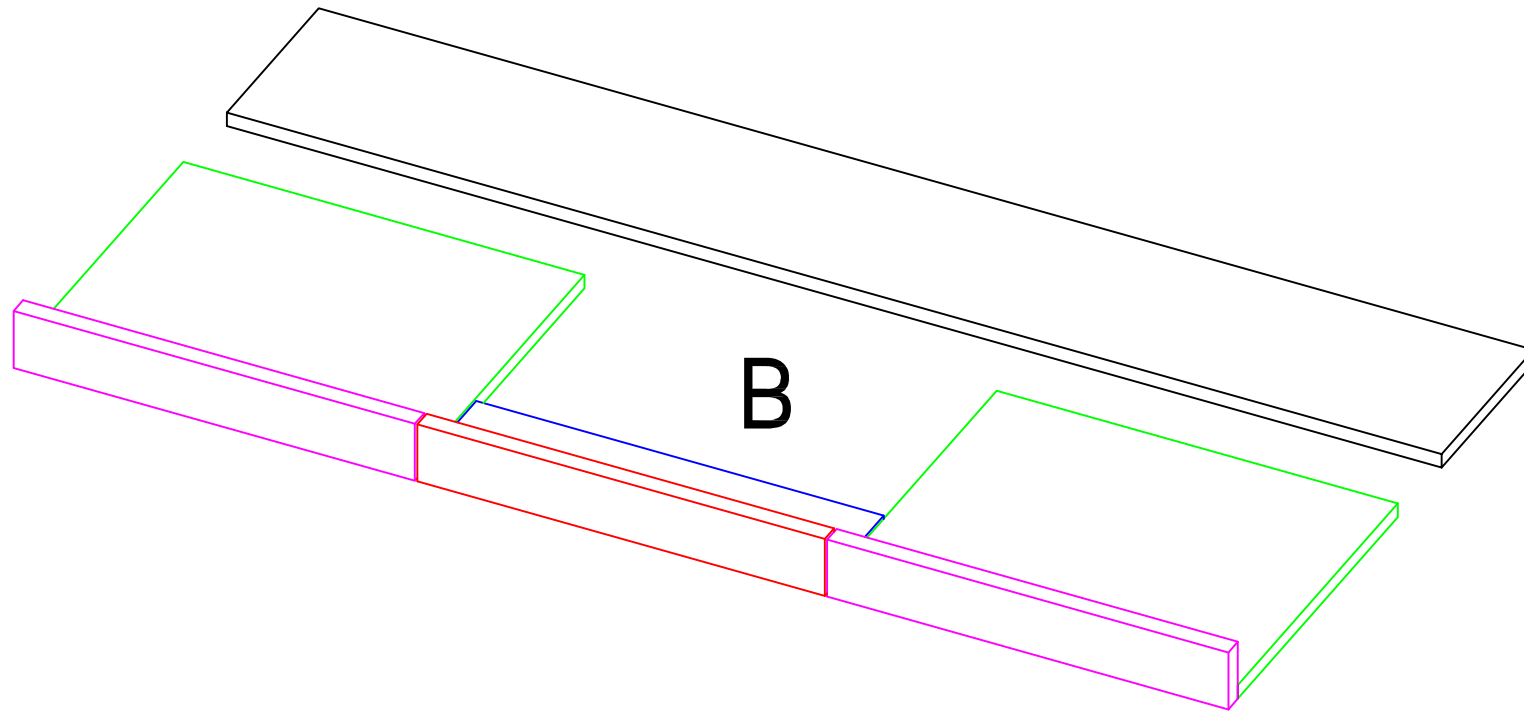


EXAMPLE OF FIXING SYSTEM:

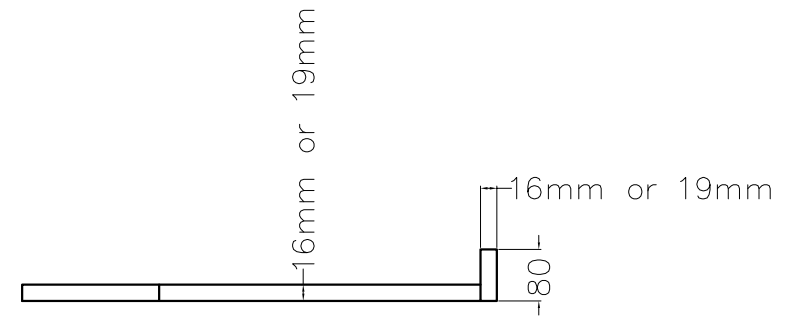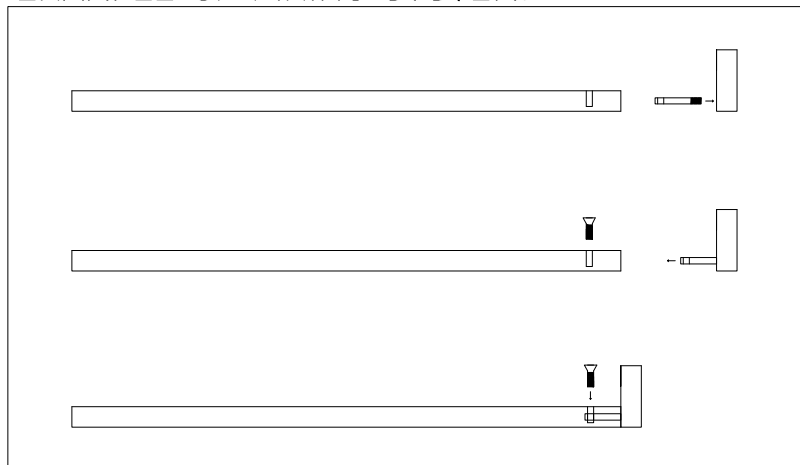

WOOD PANEL HOLES & POSITION REFERRED TO ART. 8625I3GB


(REF. B ON PAGE I)

N.1 PIECE 1771x195x16/19

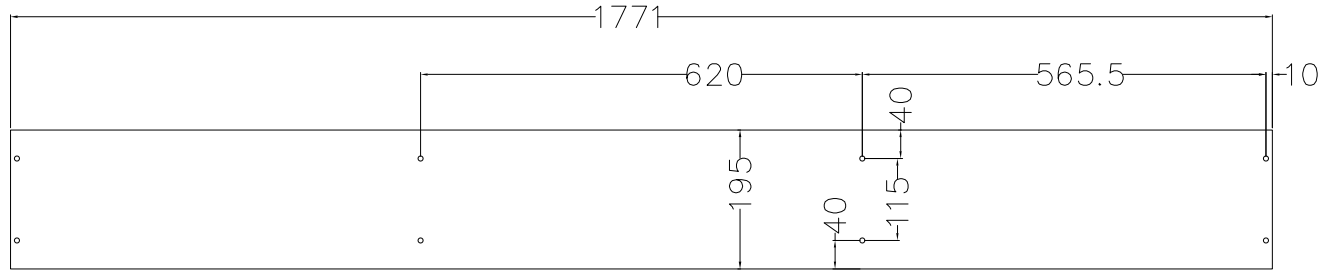


HOLES Ø8,5MM

N.2 PIECES 585.5x340x16/19

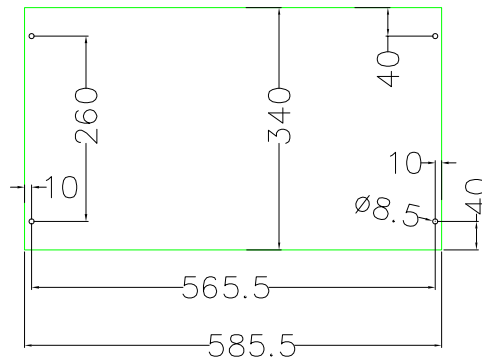


HOLES Ø8,5MM

N.2 PIECES 585.5x80x16/19

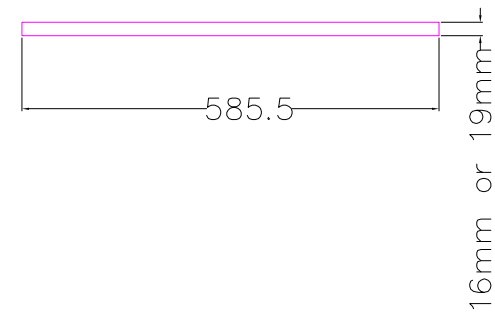


+

N.1 PIECE 594x110x16/19

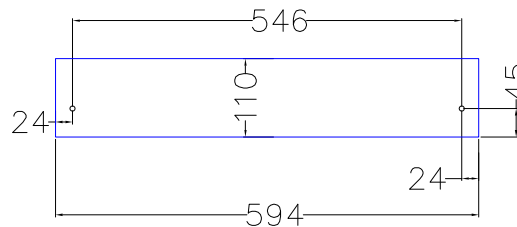



THICKNESS PANELS 16MM OR 19MM

N.1 PIECE 594x80x16/19

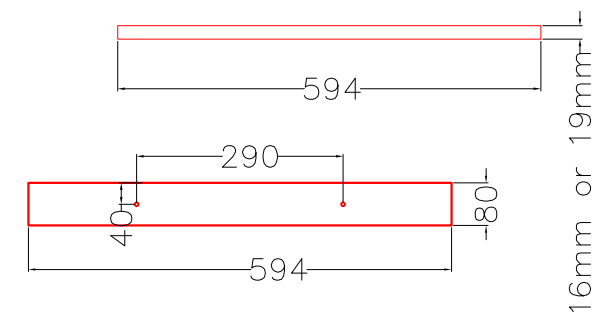


**SCREWS**  
**BAG**  
**GB1**

FOR FIXING THE PANEL USES:  
• 20 x  TP 6x30


N.2 THREADED BUSH 6MA  **6MA**

THREADED BUSH 6MA  
(HOLES COUNTERSUCK  
Ø8 DEPTH 14MM)


# ART. 8625I3GE

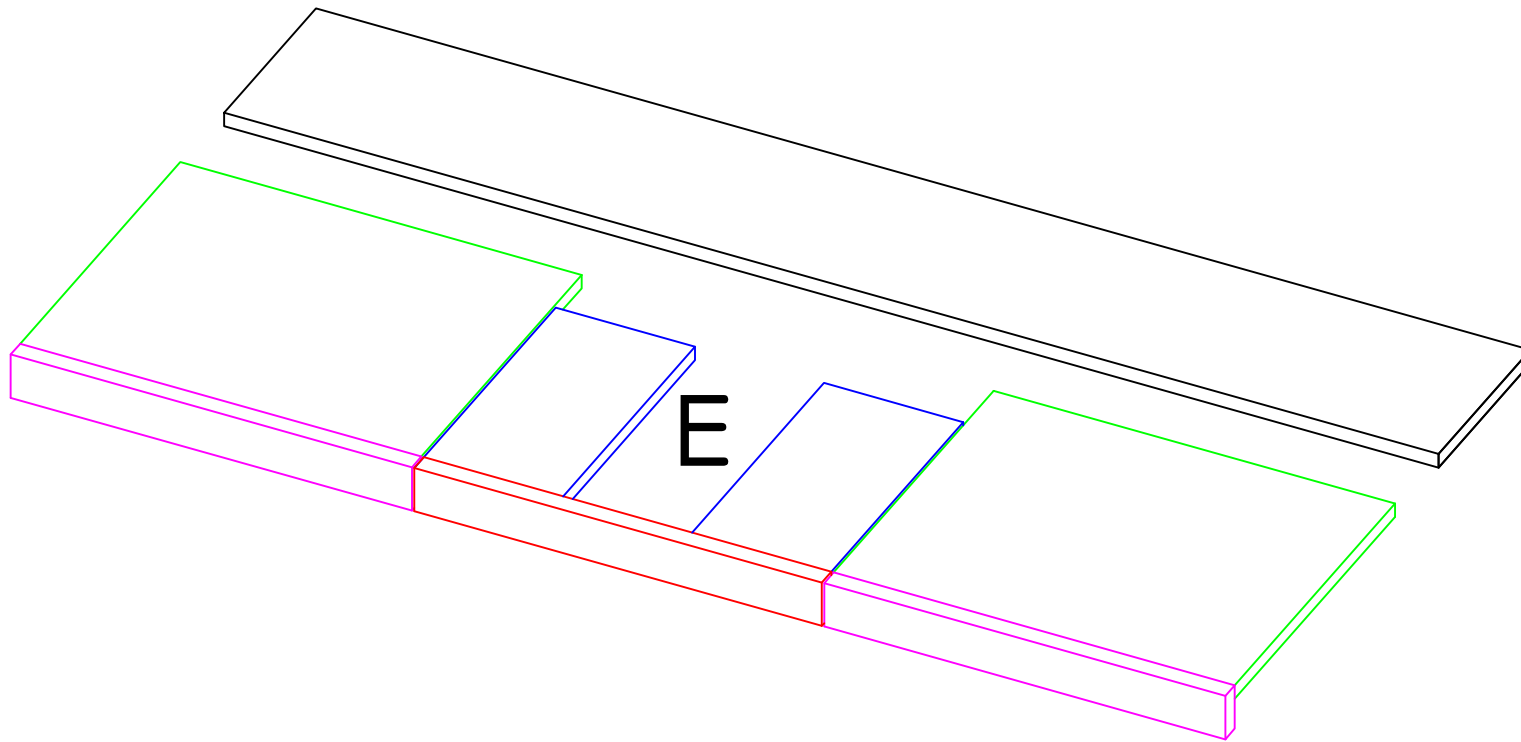

## EXAMPLE OF FIXING SYSTEM

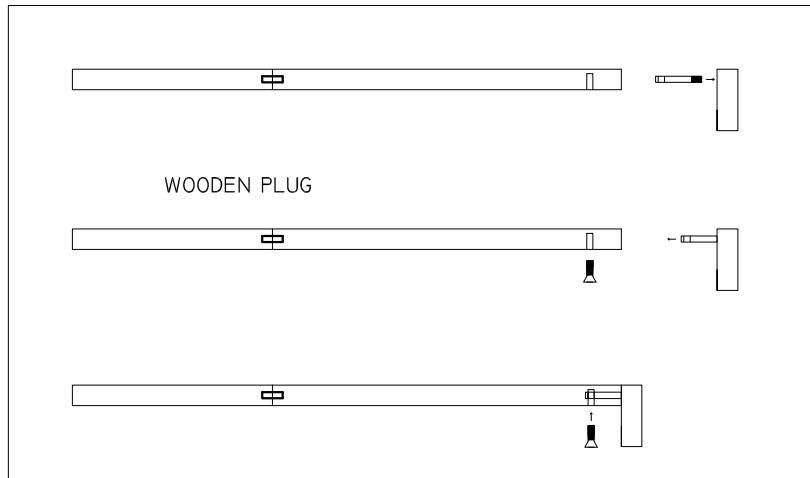


WOODEN PLUG

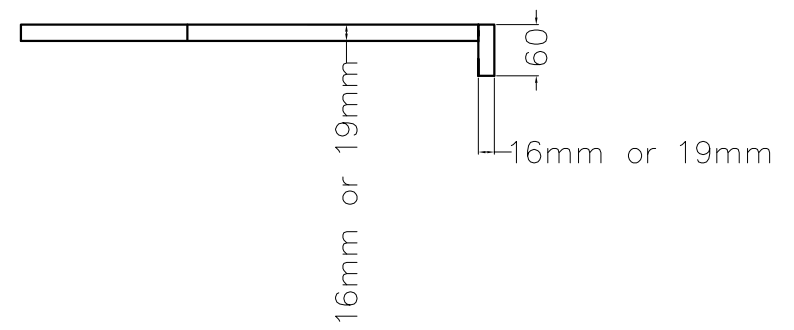


WOOD PANEL HOLES & POSITION REFERRED TO ART. 8625I3GE (REF. E ON PAGE I)

N.1 PIECE 1771x195x16/19

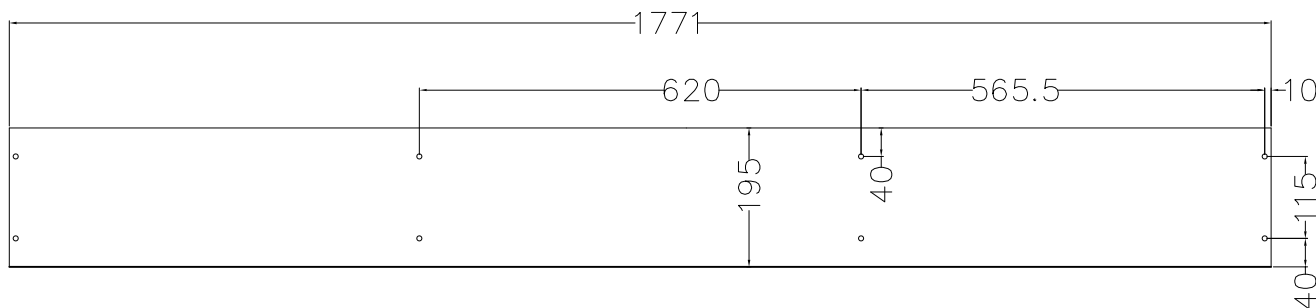

HOLES Ø8,5MM


N.2 PIECES 585.5x340x16/19

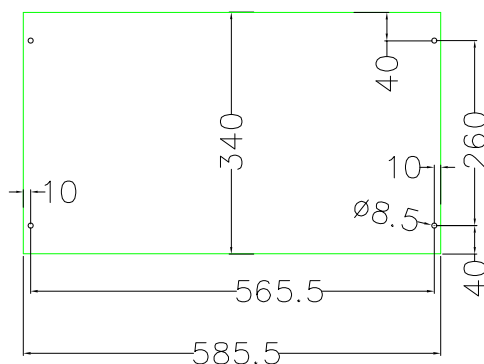


HOLES Ø8,5MM

N.2 PIECES 585.5x60x16/19


+

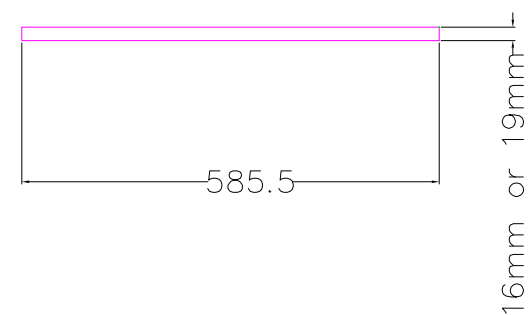

N.2 PIECE 203x280x16/19

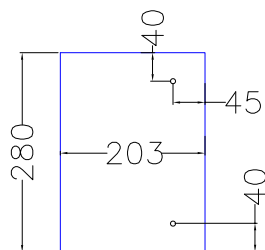


N.1 PIECE 594x60x16/19

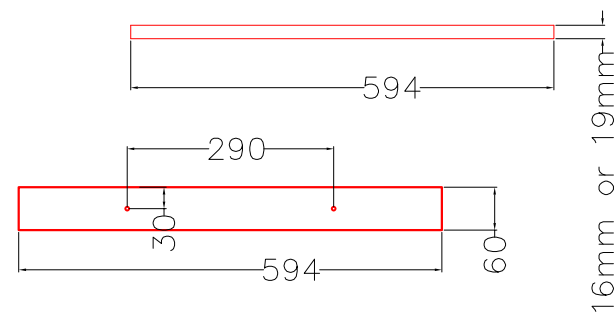


THICKNESS PANELS 16MM OR 19MM


SCREWS  
BAG  
**GE1**

FOR FIXING THE PANEL USES:



• 20 x  TP 6x30

N.2 THREADED BUSH 6MA  6MA

THREADED BUSH 6MA  
(HOLES COUNTERSUCK  
Ø8 DEPTH 14MM)

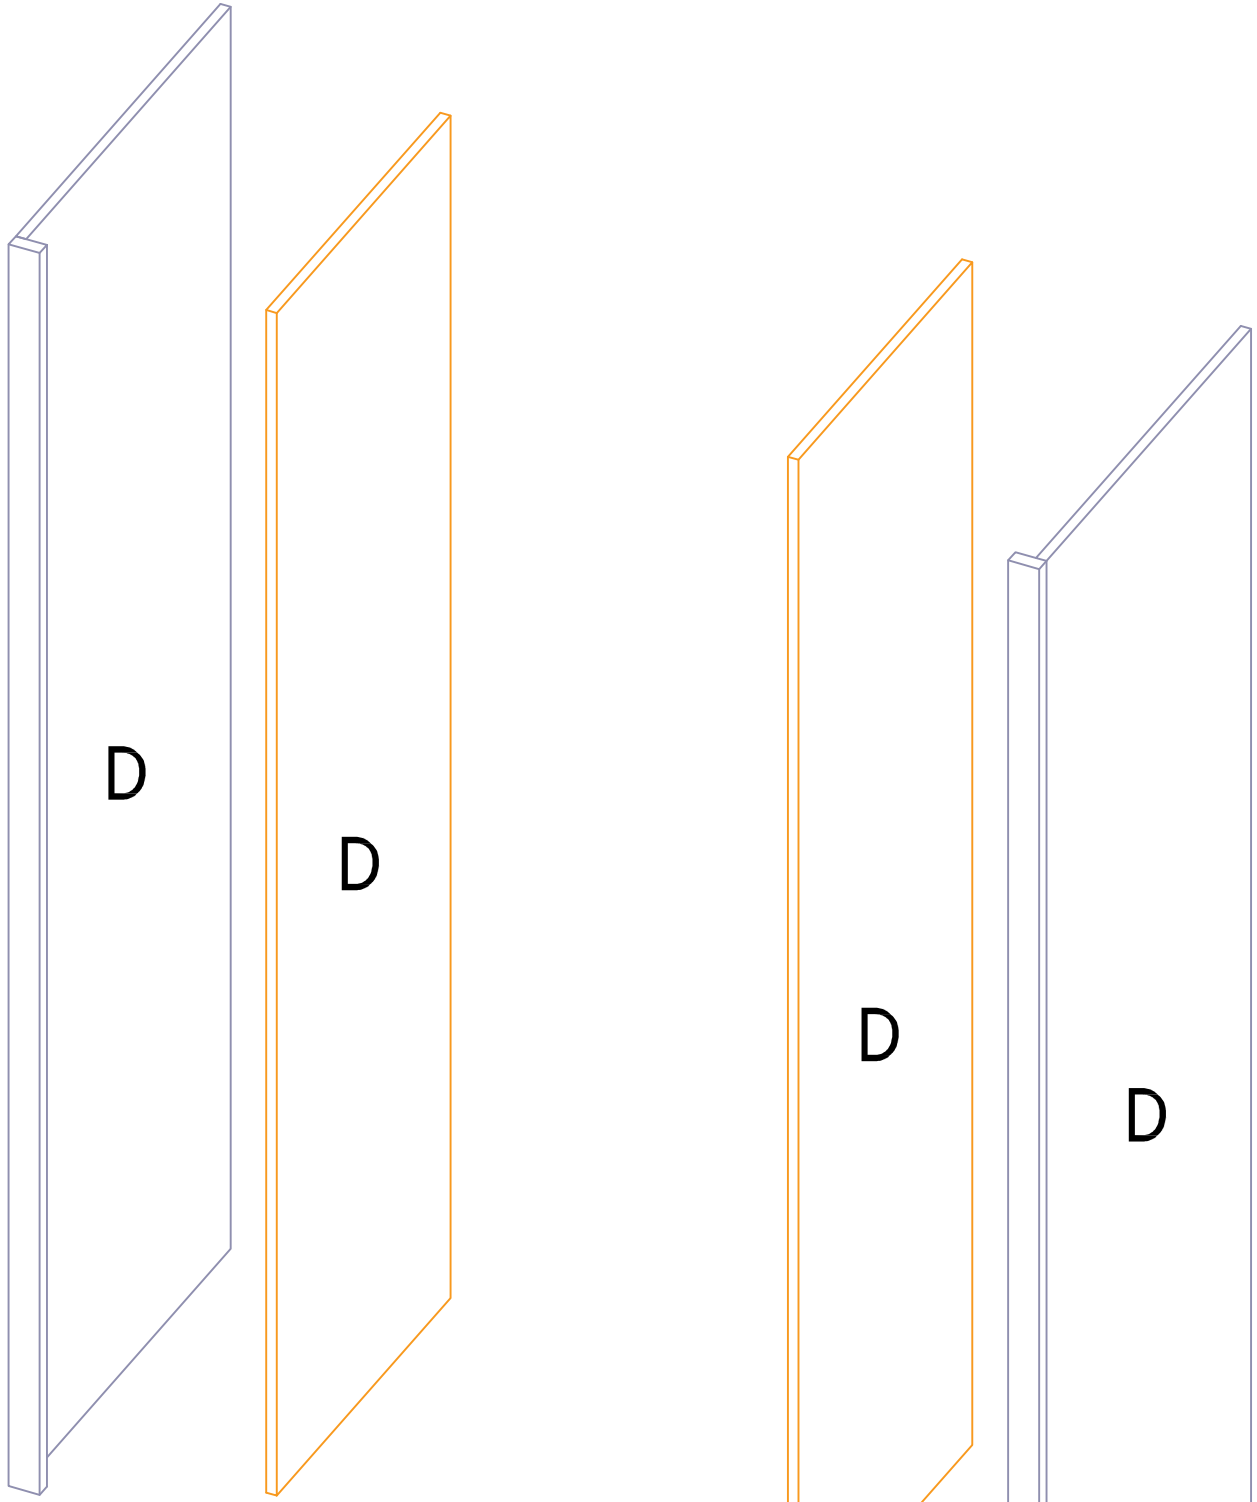


EXAMPLE OF FIXING SYSTEM

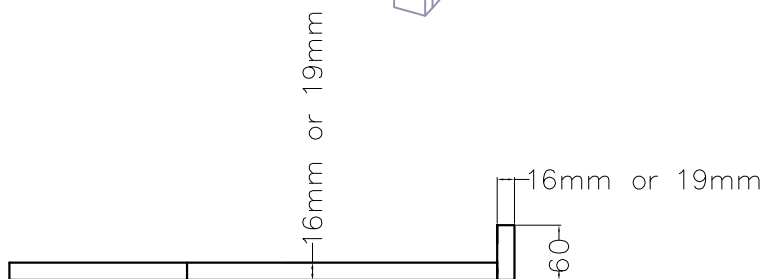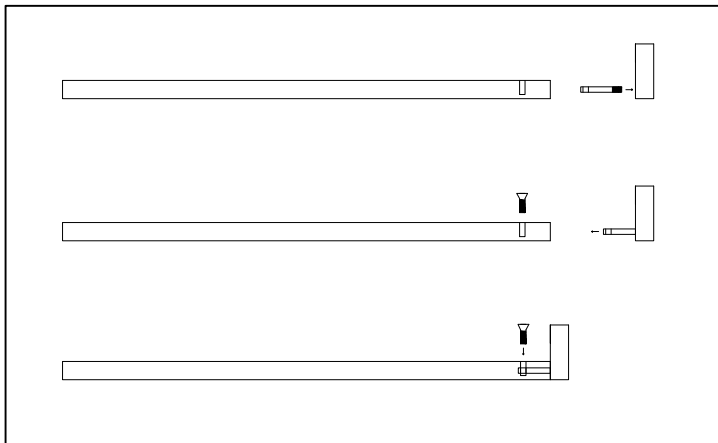

# WOOD PANEL HOLES & POSITION REFERRED TO ART. 862513GD (REF. D ON PAGE I)

## INTERNAL PANEL

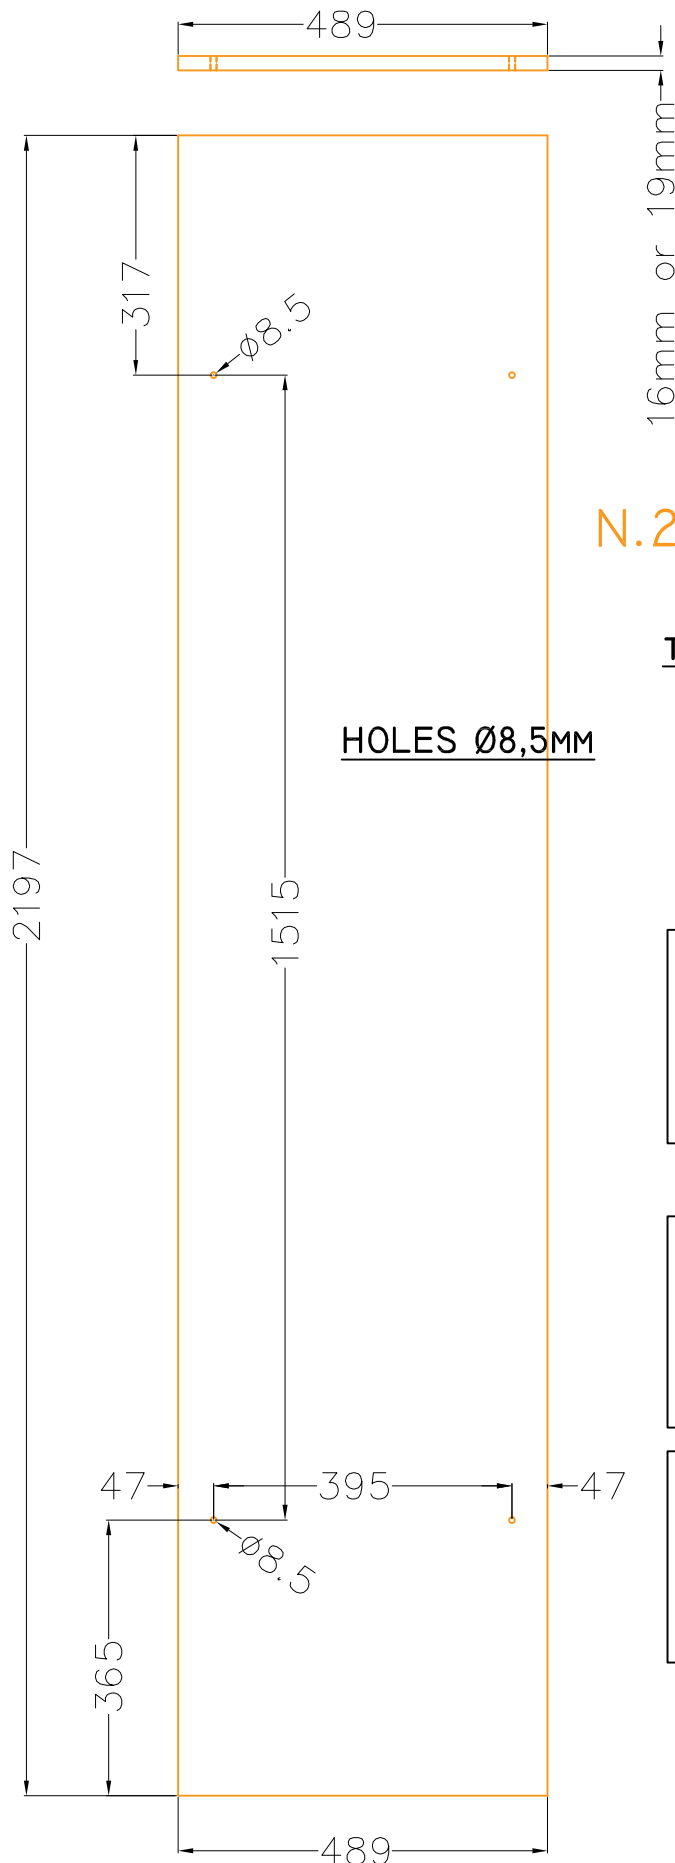


**N.2 PIECES 2197x489x16/19**

THICKNESS PANELS 16MM OR 19MM


HOLES  $\phi 8,5$ MM

**SCREWS  
BAG  
GD1**

FOR FIXING THE 16MM THICKNESS  
PANEL USE:

• 8 x  **TP 6x25**

FOR FIXING THE 19MM THICKNESS  
PANEL USE:


• 8 x  **TP 6x30**



# WOOD PANEL HOLES & POSITION REFERRED TO ART. 862513GD

(REF. D ON PAGE I)


## EXTERNAL PANEL (RIGHT AND LEFT)

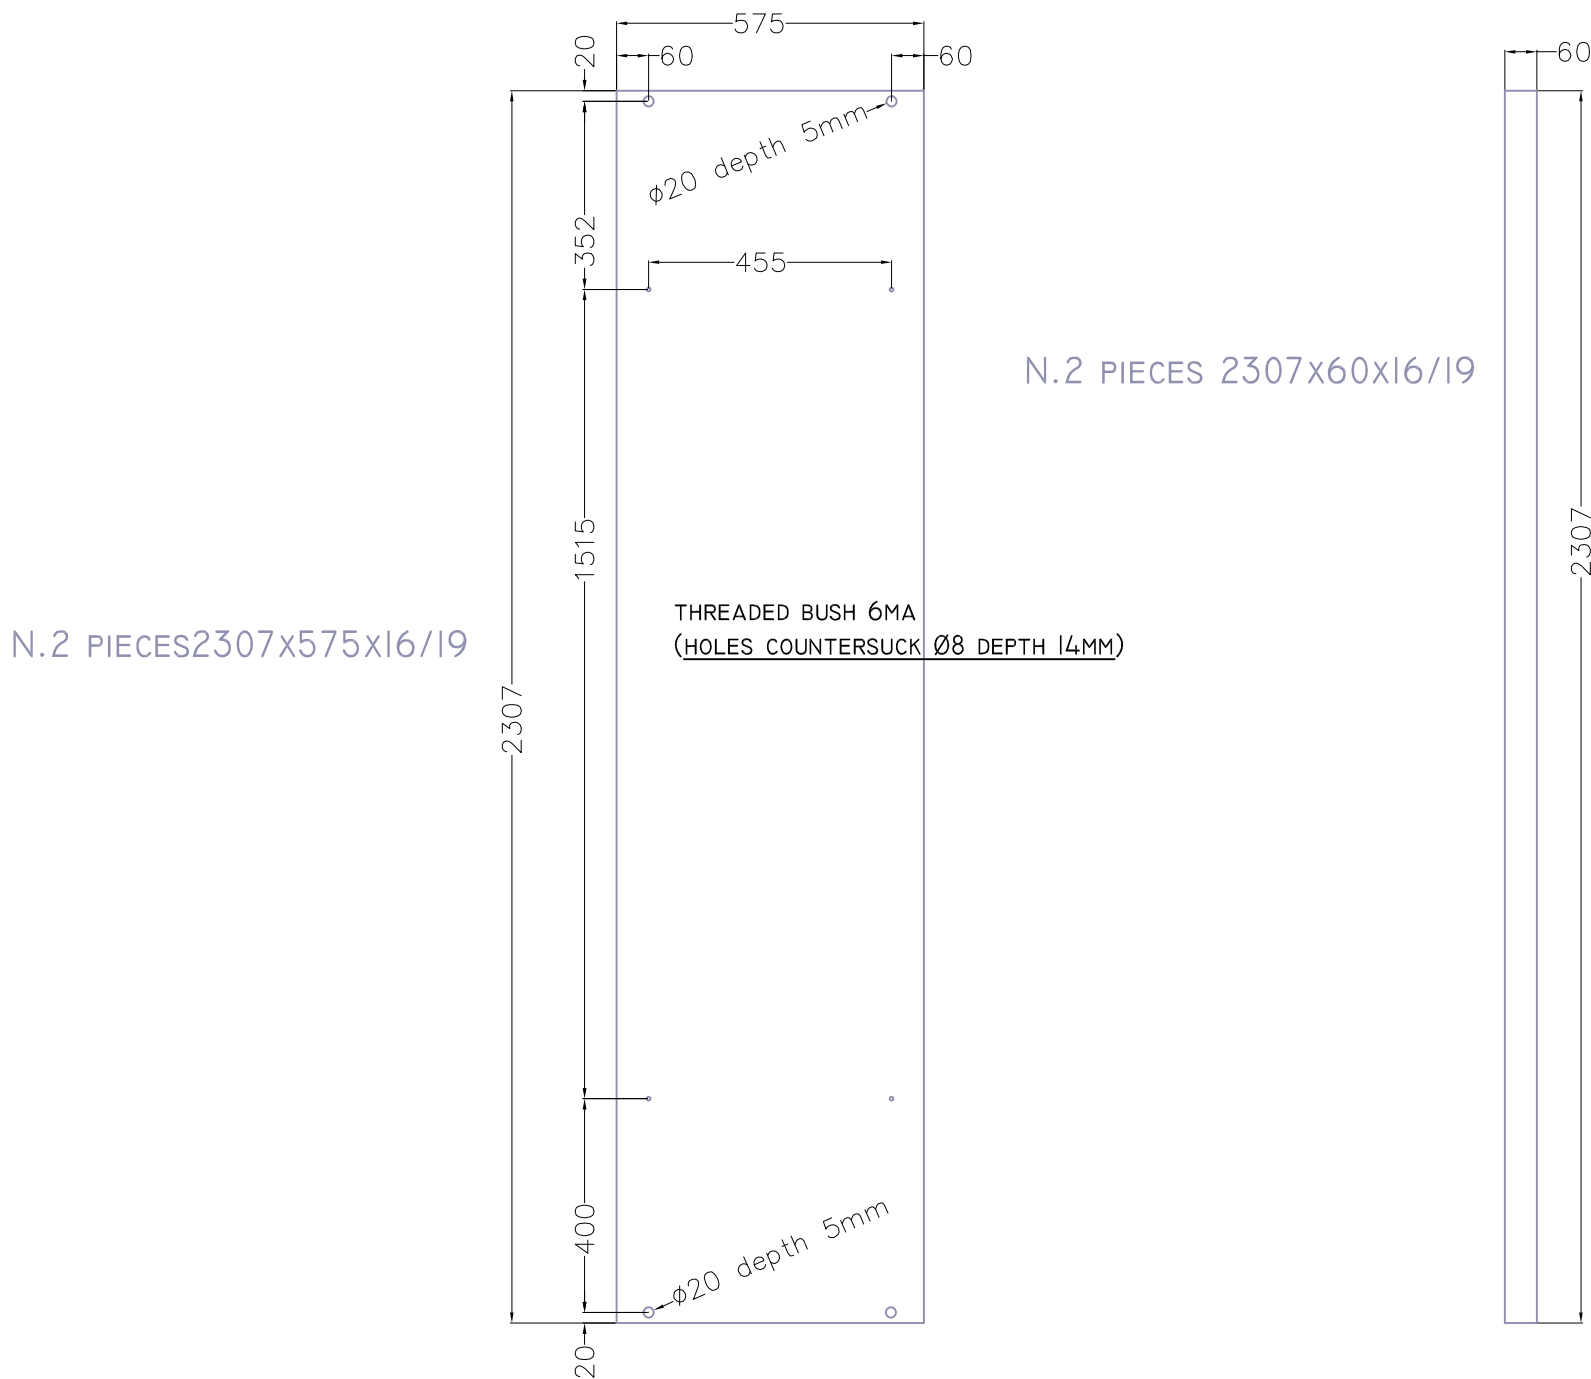

THICKNESS PANELS 16MM OR 19MM


**SCREWS  
BAG  
GD1**

N.4 THREADED BUSH 6MA  
PANEL RIGHT  
+  
N.4 THREADED BUSH 6MA  
PANEL LEFT




**6MA**

FOR FIXING THE 16MM THICKNESS  
PANEL USE:

· 8 x  **TP 6x25**

FOR FIXING THE 19MM THICKNESS  
PANEL USE:

· 8 x  **TP 6x30**