





# Installation CONCEALED version

INSTALLATION TO BE EMBEDDED INSIDE THE PANEL

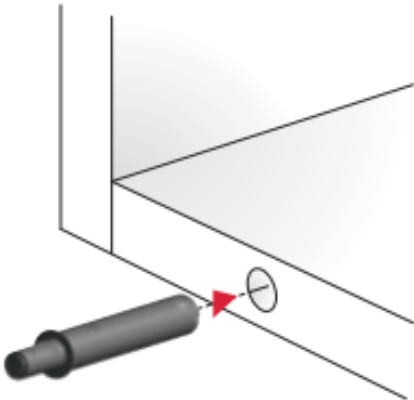


WITH MAGNET  
for cabinets using **unsprung hinges**  
or **negative hinges**.

For details refer to  
"K PUSH TECH AND  
K LOCK DOOR PLATES".

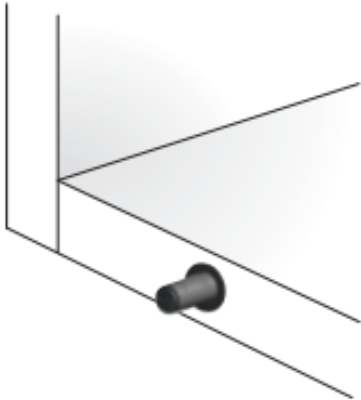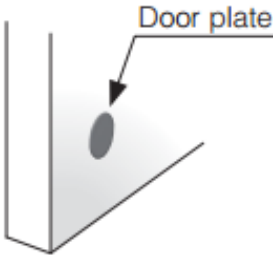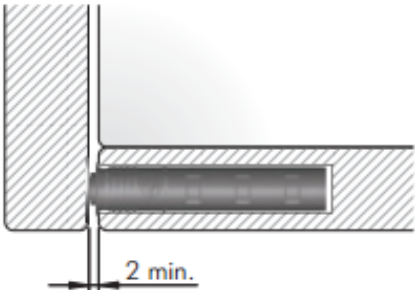

WITH BUFFER  
for cabinets using **sprung hinges**.

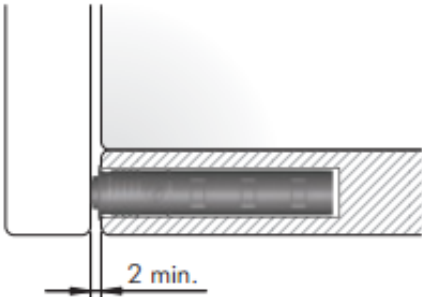

## ADJUSTMENTS

