




Installation instructions

Drawing A

Left Hand Cabinet Door

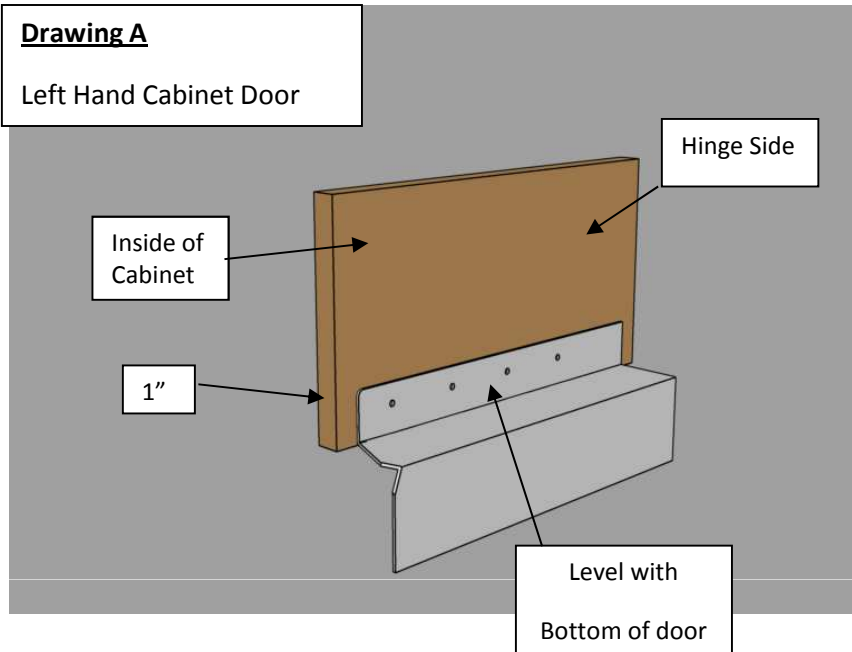

Step 1 - Place the left half of the Toe Kick (the half with the logo stamp) on the inside of the left hand cabinet door (as you are in front facing the cabinet).

Step 2 - Place the "special cuts" end 1 inch back from the non-hinge edge of the door and even with the bottom of the door as shown in Drawing A.

Step 3 – Locate the center of each of the outside holes and attach the Toe Kick to door using the enclosed screws.

Step 4 – Final adjustment can be made to reflect flooring conditions and door gap. When final placement is determined, insert the remaining two set screws.

Repeat installation for the right cabinet door with the right half of the Toe Kick.

CUTTING – The preferred tools are a sliding-arm chop saw or a radial arm saw. File off burs. ***The use of a router is not recommended.***

LAMINATING – Cut your laminate or veneer the same size as the area to be covered on the Toe Kick. Glue both surfaces as normal, stick and file. Same basic steps for vinyl or rubber cove base.

PAINTING – Krylon brand paint or a paint that will bond to plastic is recommended.

CLEANING – For best results use rubbing alcohol or a similar product. Do NOT use lacquer thinner or any type of solvent.