



BASE OF CABINET


RIGHT HAND

LEFT HAND

SELECT INSTALLATION HAND DESIRED & DRILL (4) 3/32" DIA. HOLES 3/4" DEEP OR THRU AS SHOWN IN ILLUSTRATIONS.


EURO BRACKET TEMPLATE ONLY

RIGHT HAND (LOOKING FROM INSIDE OF CABINET)
USE TAPE TO SECURE TEMPLATE.
DRILL DARKENED HOLES SHOWN FOR RIGHT HAND.
USE WITH BRACKET
6880-68-2

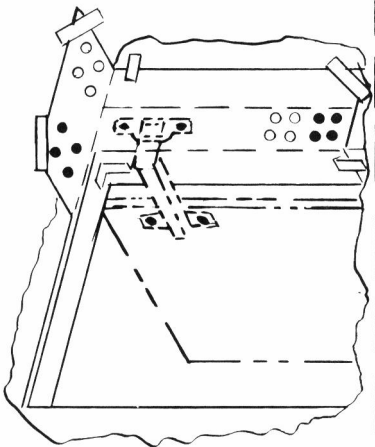


FOR USE WITH 90° EUROPEAN BLIND CORNER BASE HINGE & FULL INSET DOORS

LEFT HAND (LOOKING FROM INSIDE OF CABINET)
USE TAPE TO SECURE TEMPLATE.
DRILL DARKENED HOLES SHOWN FOR LEFT HAND.
USE WITH BRACKET
6880-68-2

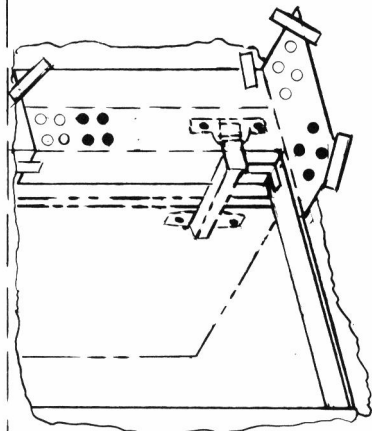

RIGHT HAND BRACKET
BEND ON PERFORATED LINE AND DRILL!
(1) DRILL - (4) 3/32 DIA. FOR #8 TAPPING SCREWS
(2) DRILL - (4) 5mm DIA. FOR 6mm EURO SCREWS
(DOOR & HINGES, SHOULD BE REMOVED TO INSTALL HARDWARE.)

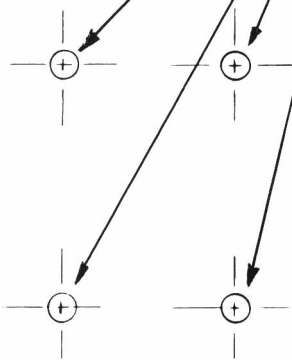

BRACKET INSTALLATION
DO NOT DRILL FOR OPTIONAL SCREWS:
TAPPING SCREW
EURO SCREW
DO NOT DRILL THRU CABINET
HOWEVER
MOVED TO FIT TEMPLATE &