


Dotted line align with inside bottom of cabinet

Front door center  
T=Thickness of panel

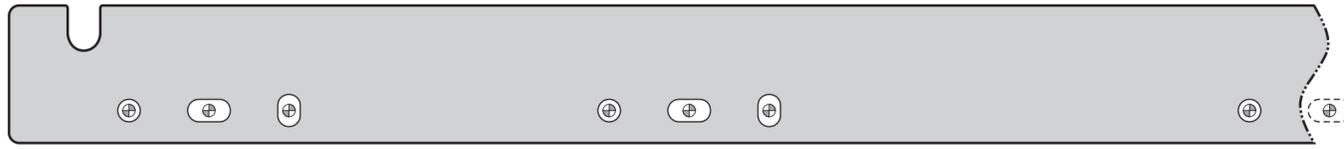


Fitting instructions


**IMPORTANT** - The unit has a maximum loading limit of 45kg including door.  
Bin to suit 600mm wide cabinet using 16-19mm thick carcass material.  
All fixings supplied must be used for installation.

- Parts**
- A x12 4 x 16mm screw
  - B x8 4 x 14mm screw
  - C x4 Screw (M4 x 8mm)
  - D x2 Screw (M6 x 16mm)
  - E x6 Screw (M5 x 10mm)
  - F x4 Screw (M5 x 6mm)
  - T x4 Washer (5x18x2mm)
  - N Lid x1
  - Q Container x2
  - G Lid bracket LH x1
  - H Lid bracket RH x1
  - P Frame x1
  - R Spacer x6
  - J Runner LH x1
  - K Runner RH x1


Tools required



Dimensions - maximum

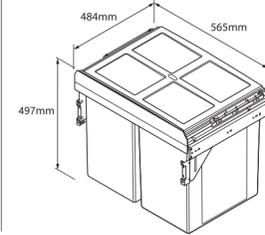


1 Mark screw positions for lid brackets and runners on both cabinet sides.

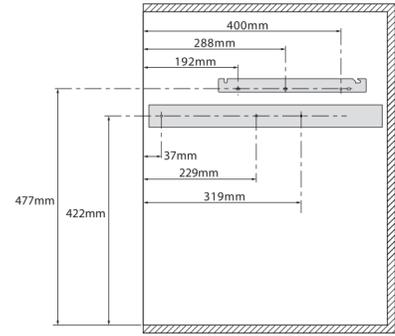


- 1. Spacer will be used if there is gap between board and slide.
- 2. Please ensure that all the above fittings are present before installation begins.


2 Lift the locking levers and remove the front part of each runner.  
Ensure shoulder of bracket faces outwards.

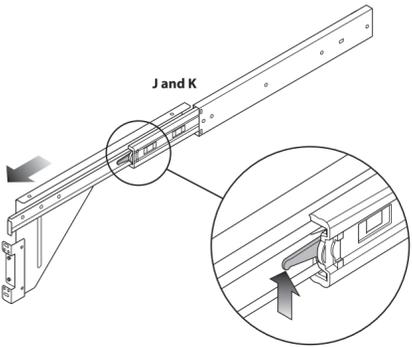

3 Fit the lid brackets and runners to cabinet sides using screws A.

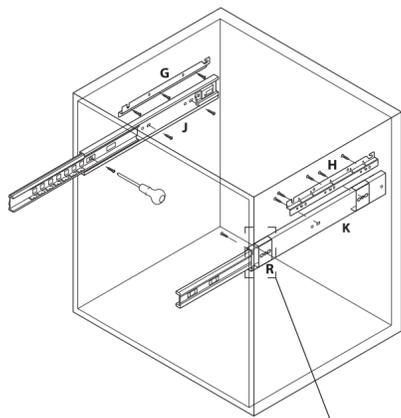


4 Fit the door brackets to the door.

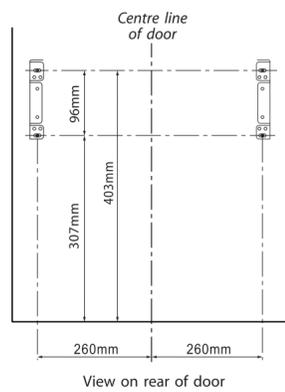


Calculate centre line of door and use above measurements to mark door bracket screw positions.

**IMPORTANT:**  
When fitting the brackets to the door careful consideration should be taken to ensure fixing screws do not protrude through the fascia.

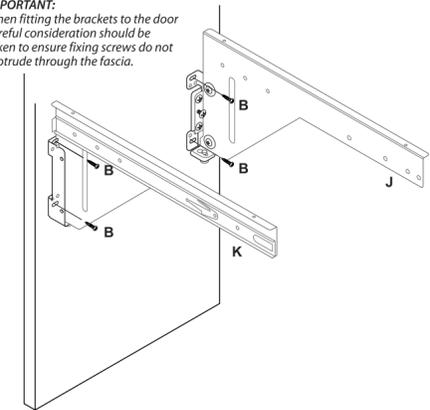

Fit door brackets to door using bracket screw positions.

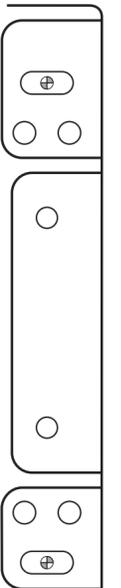

Align with cabinet side panel front




Front door center  
T=Thickness of panel




Align with inside bottom of cabinet side panel

Dotted line align with inside bottom of cabinet


Front door center  
T=Thickness of panel

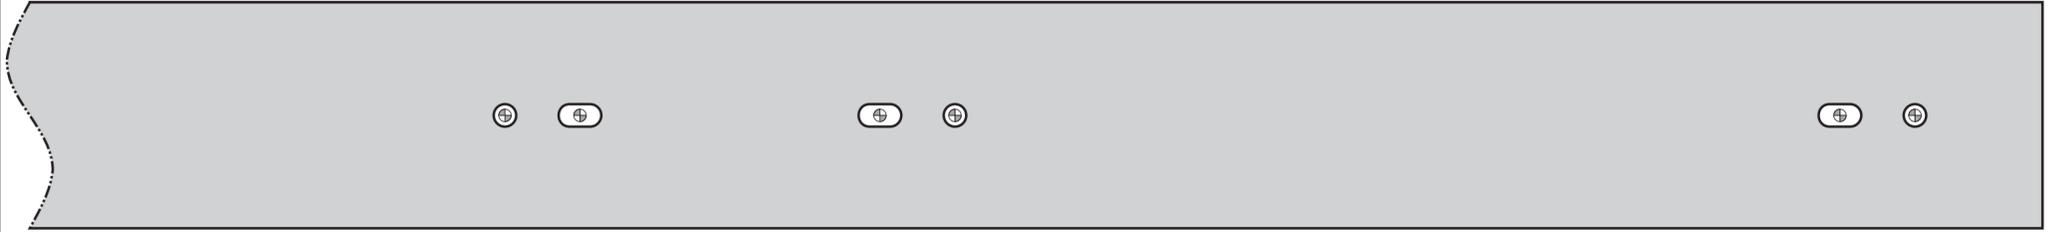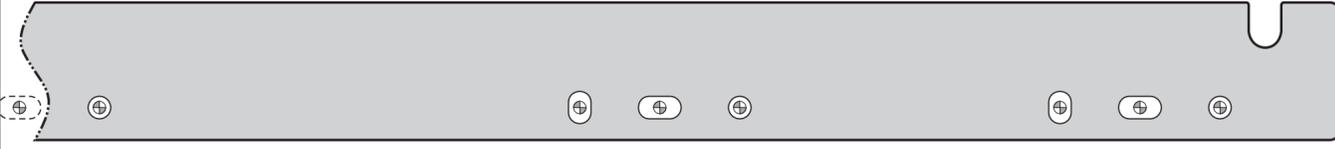



**5** Assemble each runner until the locking levers are securely attached.

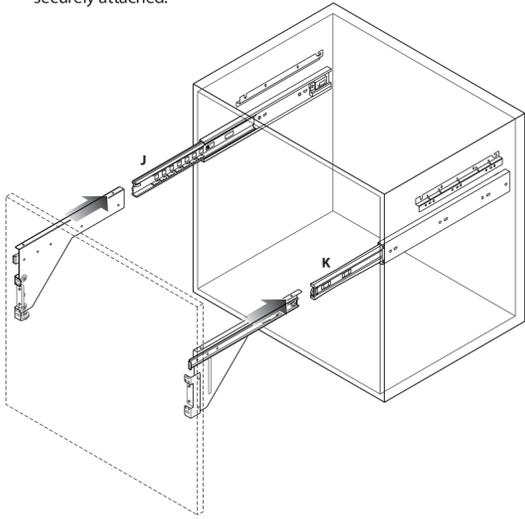


**6** Fit the frame to the runners using screws **c**

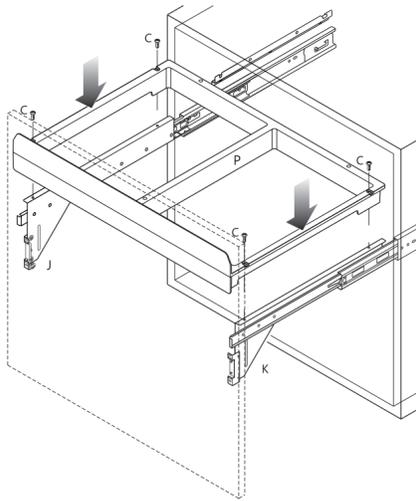

**7** Fit the lid to the lid brackets.

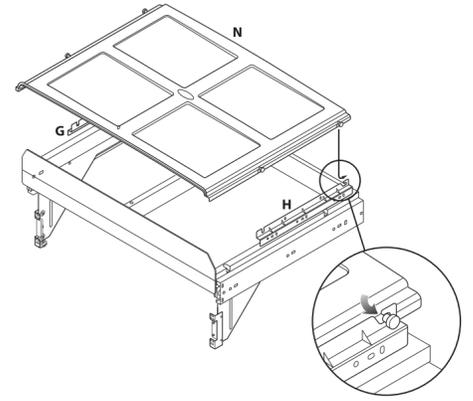


**8** Align the door to the cabinet using the adjustment screws.

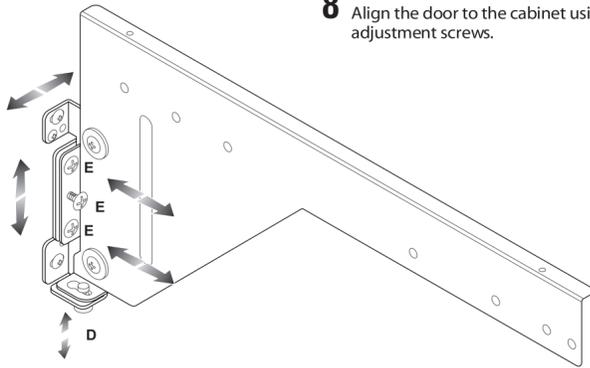




**9** Fit the containers.




**IMPORTANT** - The unit has a maximum loading limit of 45kg including door.

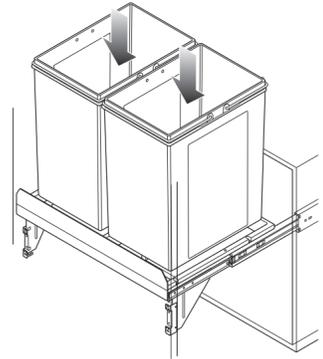

**10** Drilling position for front door

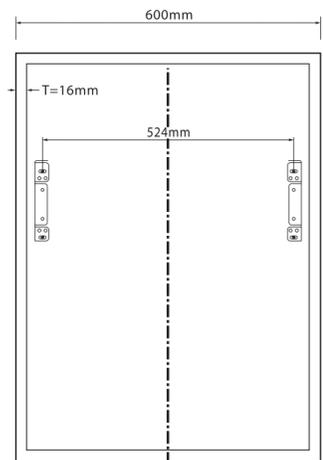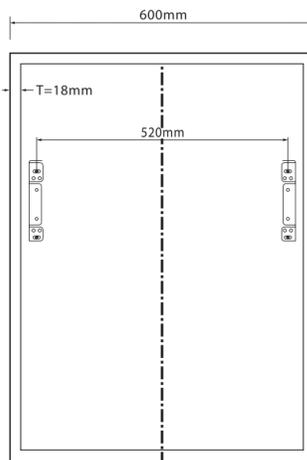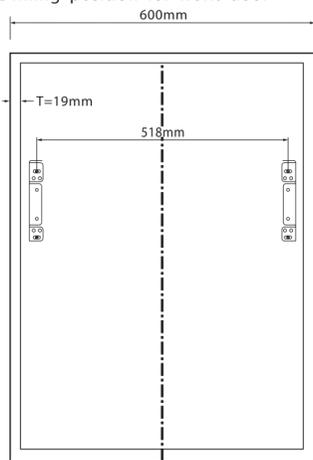

Front door center  
T=Thickness of panel



Align with inside bottom of cabinet side panel

Align with cabinet side panel front

