



B

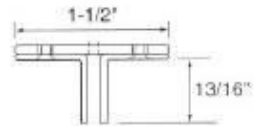

C

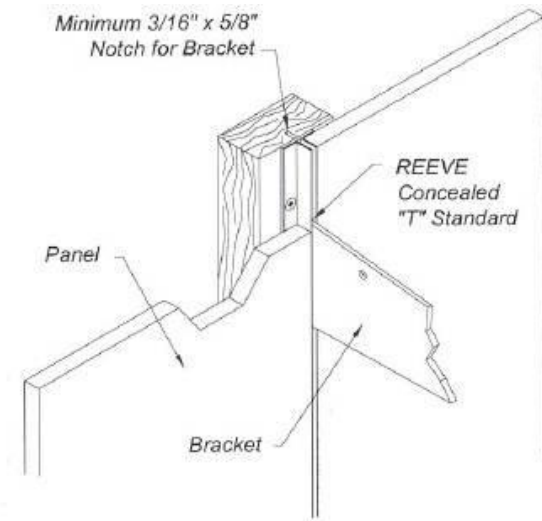

All recessed/ concealed « T » standards should be mounted right side up as shown by the "top" stamp (A). Before mounting, line up each standard using the bottom of each bottom slot as the guide. Once aligned, makes sure to fasten to a secure wall stud (or equivalent blocking) using appropriate screws (C). Make sure to utilize each screw hole. Please note that a minimum 3/16" by 5/8" notch is required in the stud or blocking to allow installation of brackets.