

# ART. 8521016

DON'T FORGET TO SEE THE «FOCUS ON» DOCUMENT

## MOUNTING MONTAGE



**N'OUBLIEZ PAS DE CONSULTER LE DOCUMENT "FOCUS ON"**




Make sure to fix your cabinet to the wall.


As wall materials vary, plates and screws for fixing to wall are not included.

Warning: you must be ensured that during the handling of folding bed there is no people, animal or things in the area or on the bed. They may be bumped during movement.

ASSUREZ-VOUS DE FIXER VOTRE CABINET AU MUR.

COMME LE MATÉRIEL DES MURS PEUT VARIER, LES PLAQUES ET LES VIS POUR LA FIXATION AU MUR NE SONT PAS INCLUSES. **ATTENTION:** LORS DE LA MANIPULATION DU LIT, ASSUREZ-VOUS QU'IL NY AIT PAS DE GENS, ANIMAUX OU DES CHOSES À PROXIMITÉ DU LIT. ILS POURRAIENT ÊTRES HEURTÉS DURANT LE MOUVEMENT.

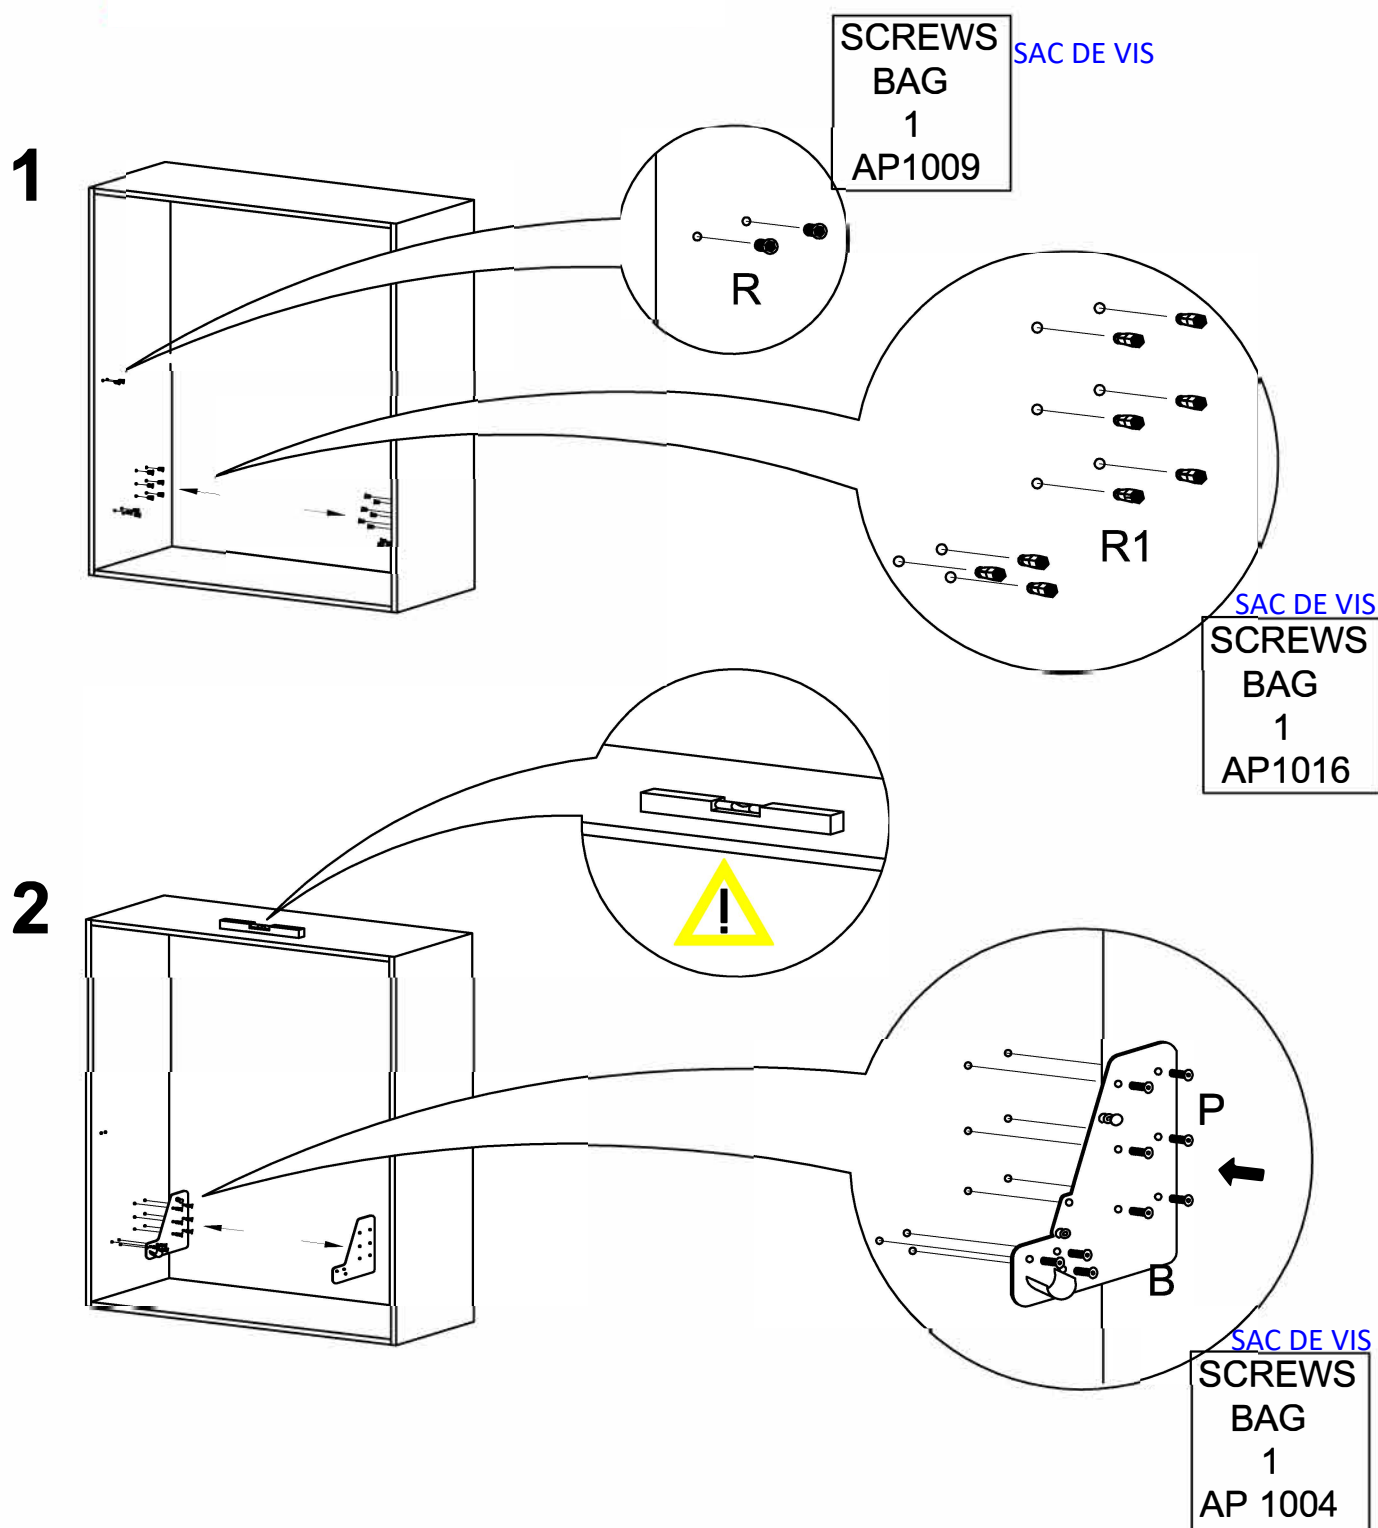


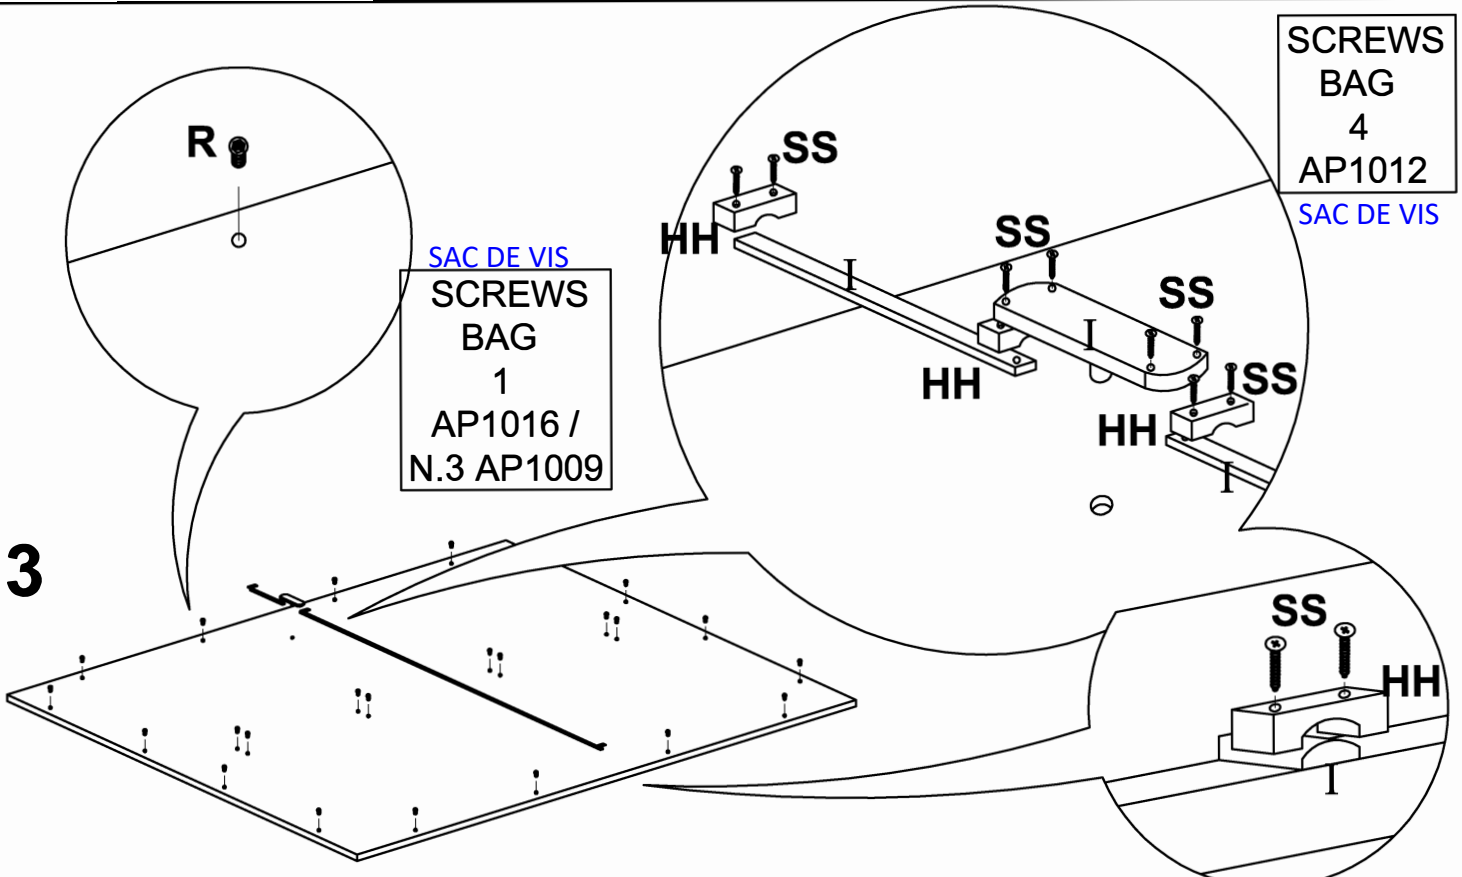

SCREWS  
BAG  
4  
AP1012  
SAC DE VIS

SAC DE VIS  
SCREWS  
BAG  
1  
AP1016 /  
N.3 AP1009

3

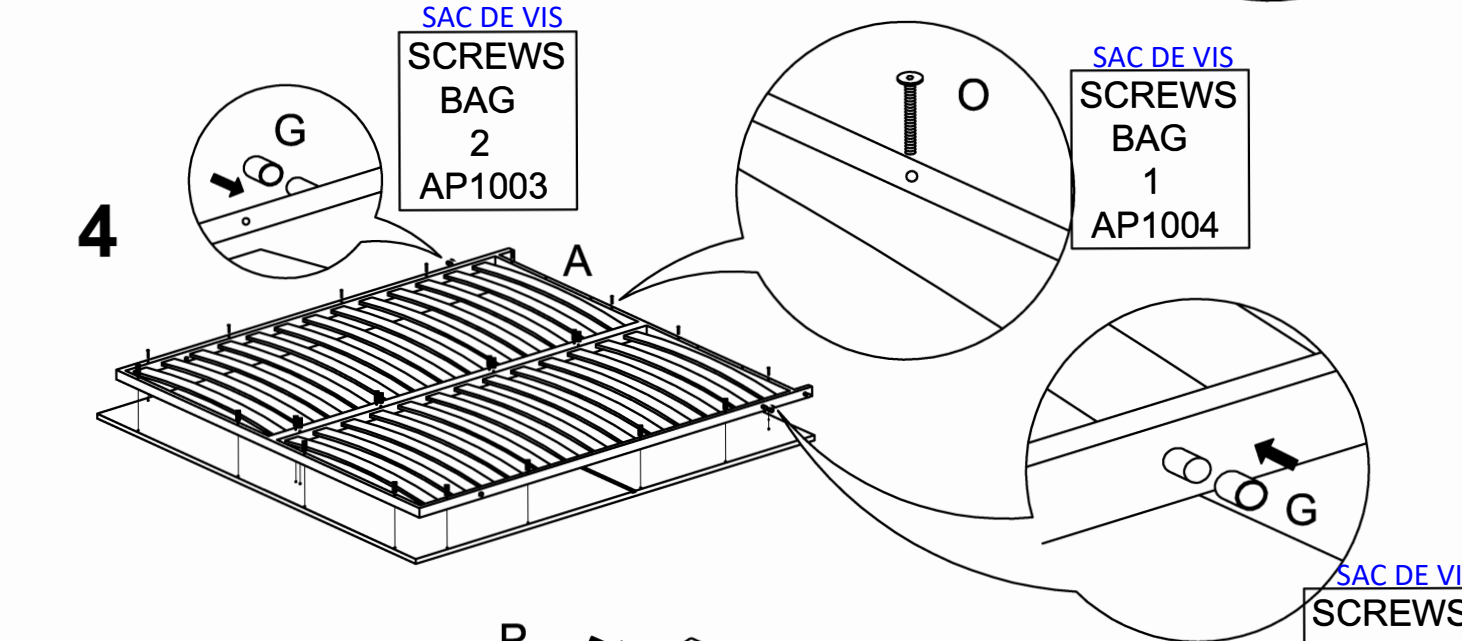


SAC DE VIS  
SCREWS  
BAG  
2  
AP1003

SAC DE VIS  
SCREWS  
BAG  
1  
AP1004

4


SAC DE VIS  
SCREWS  
BAG  
2  
AP1003

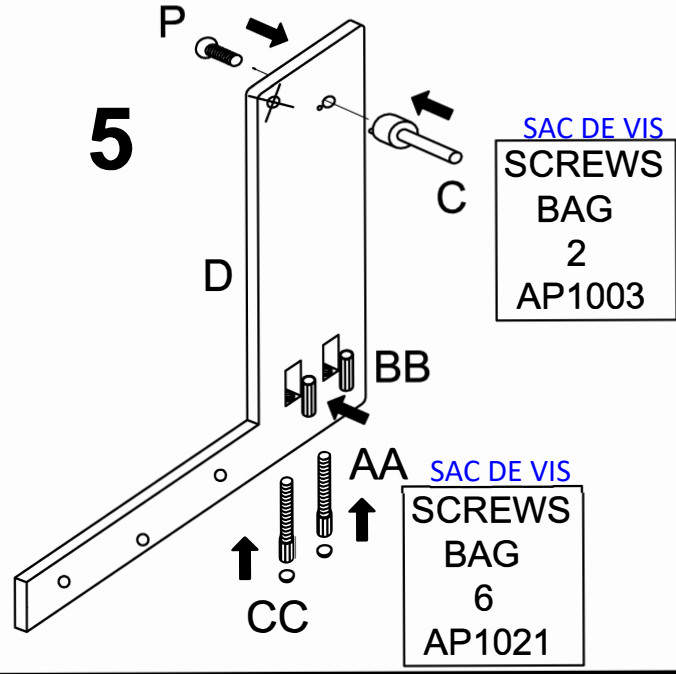


SAC DE VIS  
SCREWS  
BAG  
2  
AP1003

SAC DE VIS  
SCREWS  
BAG  
6  
AP1021

5

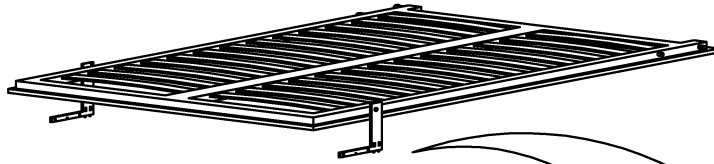


**6**

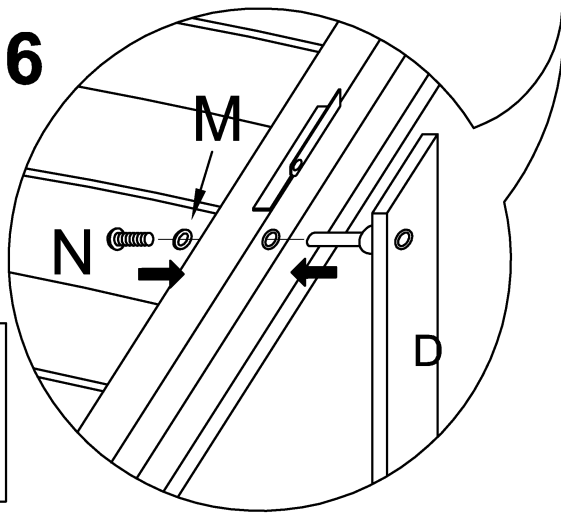



SAC DE VIS  
SCREWS  
BAG  
2  
AP1003

**7**


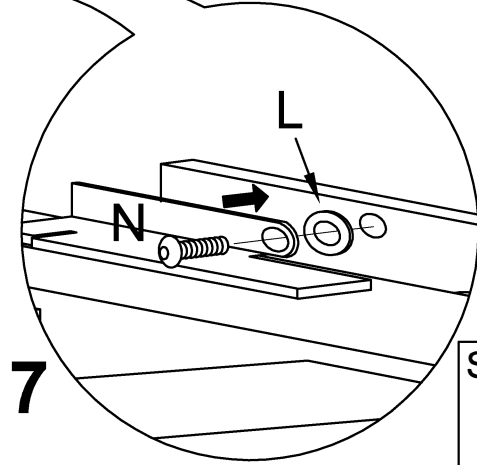


SAC DE VIS  
SCREWS  
BAG  
2  
AP1003


**8**

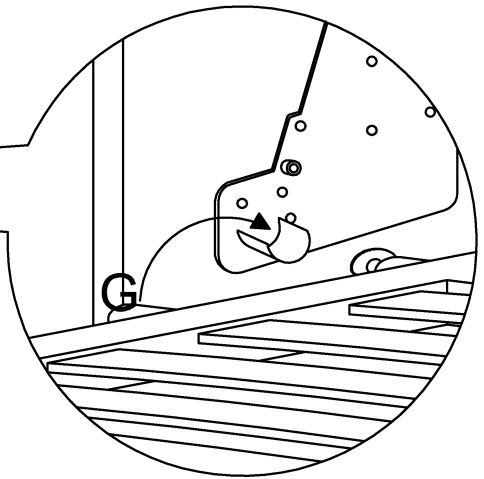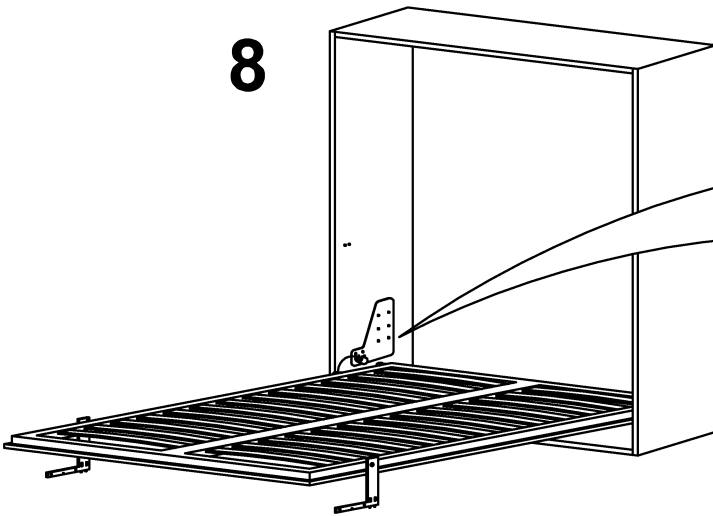


**9**

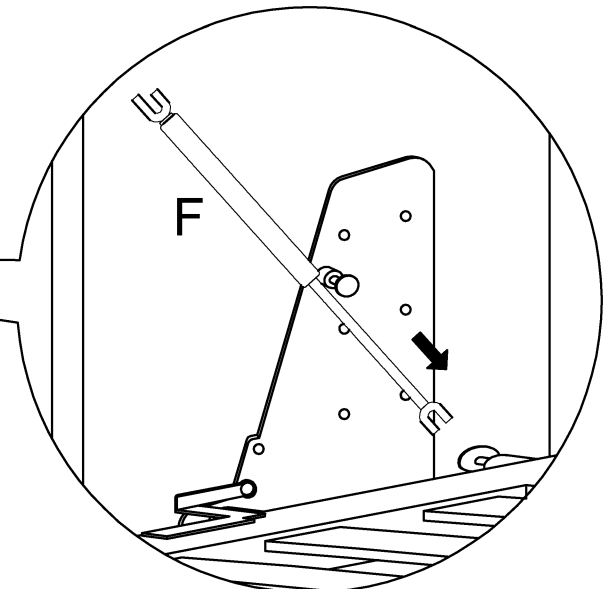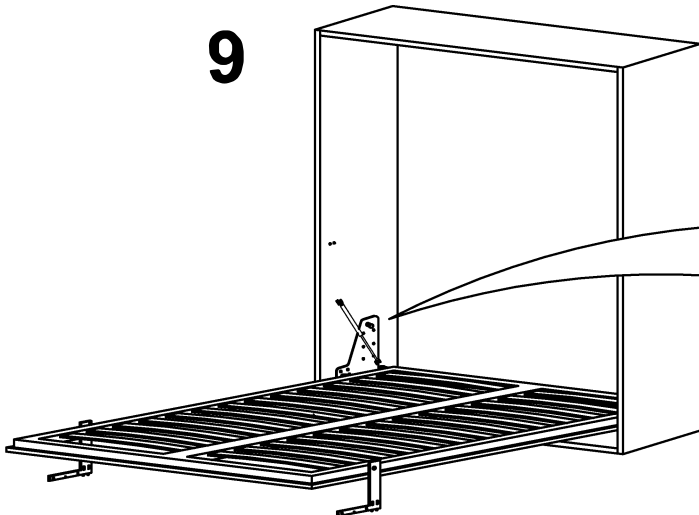


10

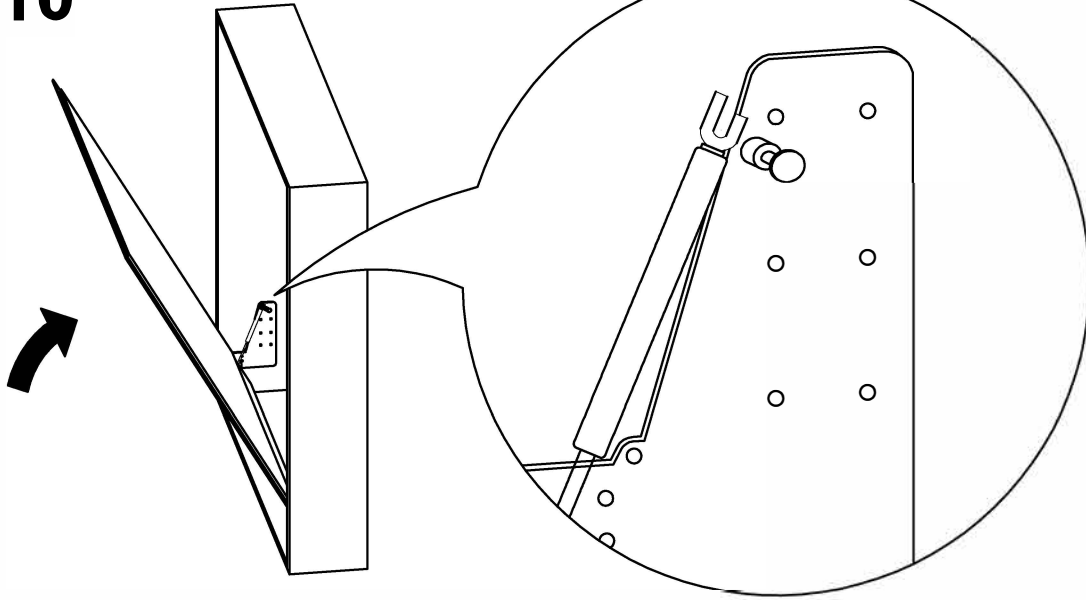


11

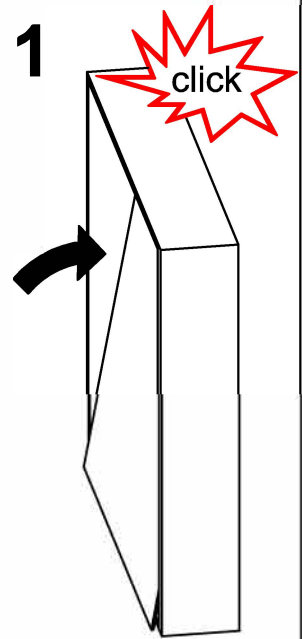


12

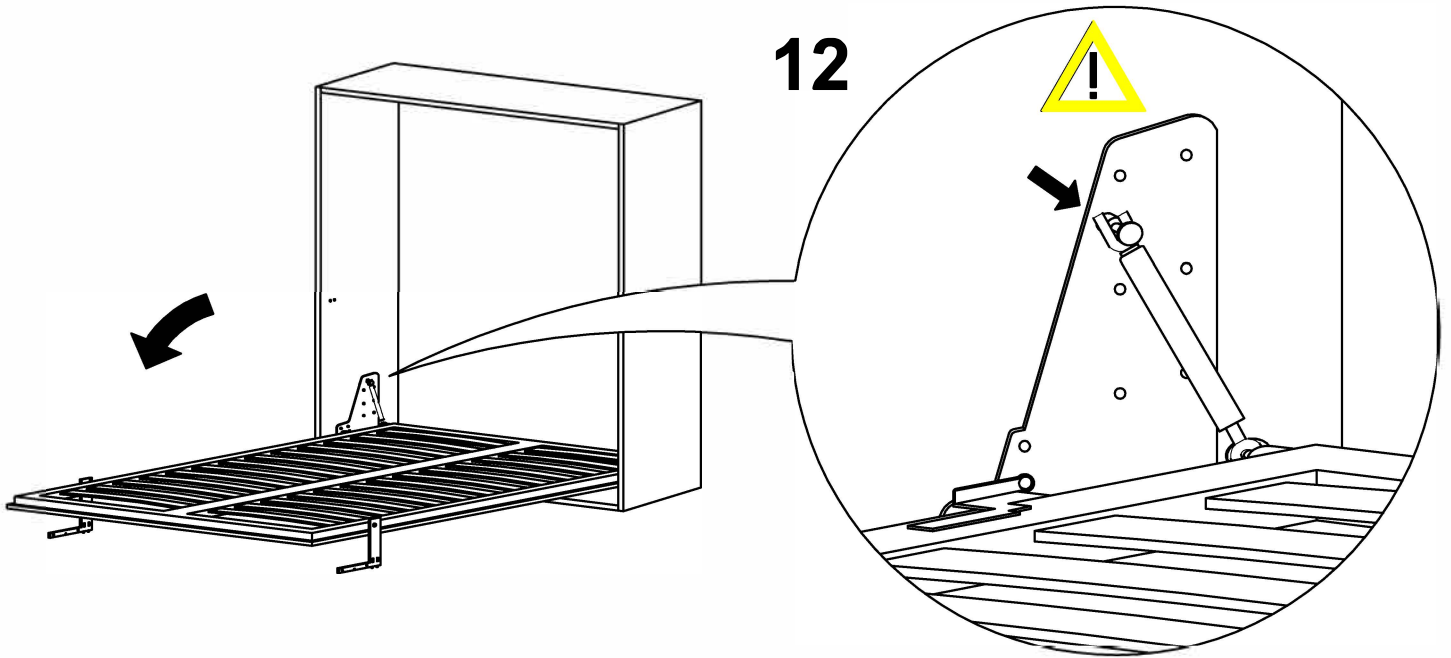

13


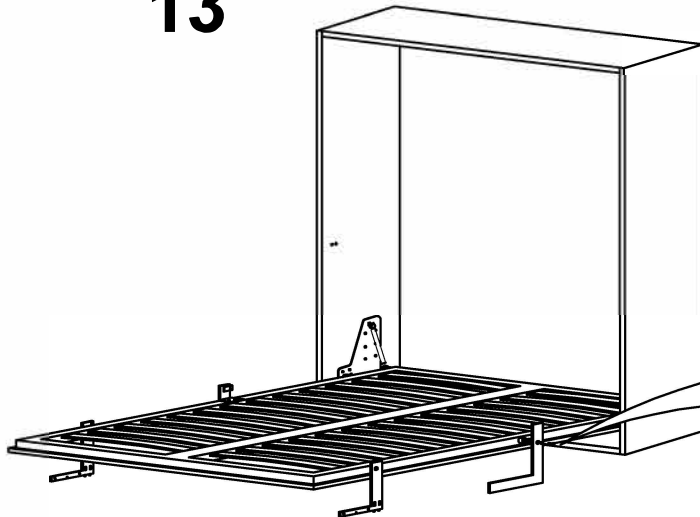


SAC DE VIS  
 SCREWS  
 BAG  
 3  
 AP1013

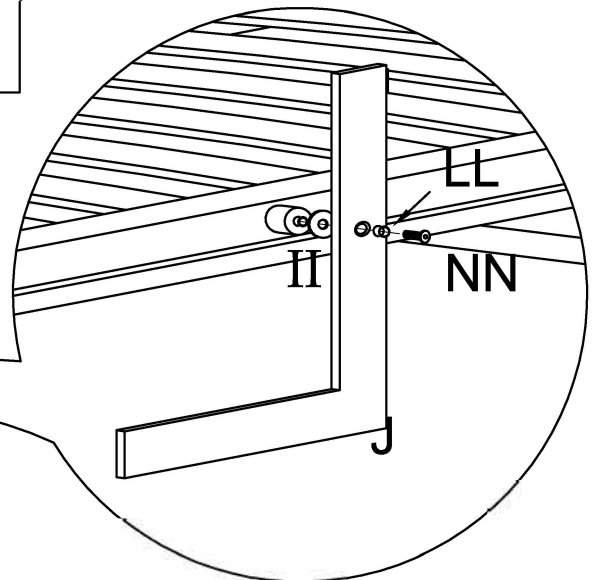



14

SCREWS  
BAG  
3  
AP1013  
SAC DE VIS

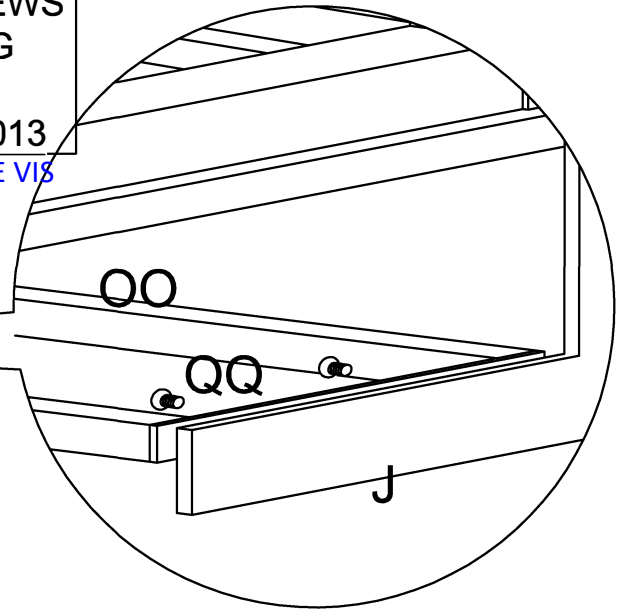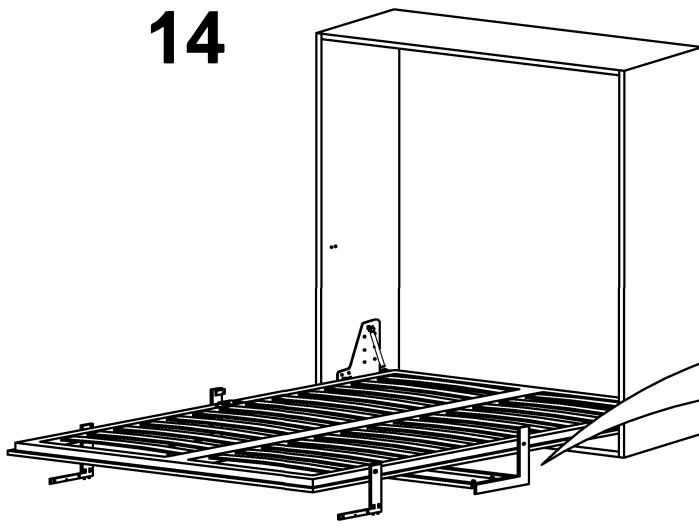



15

SAC DE VIS  
SCREWS  
BAG  
3  
AP1013

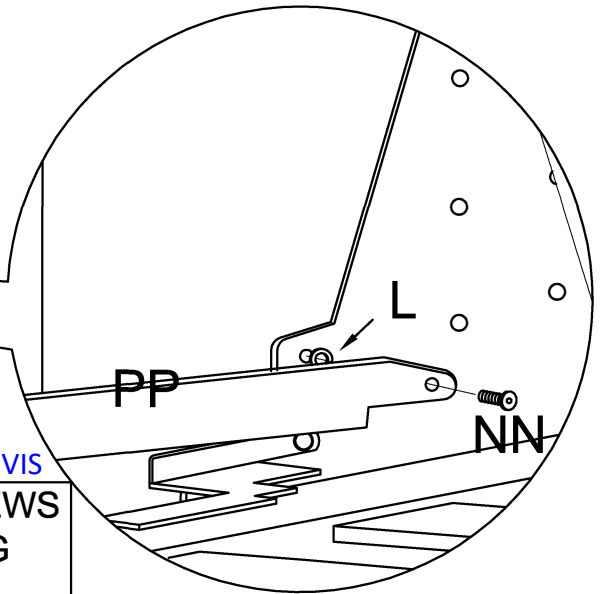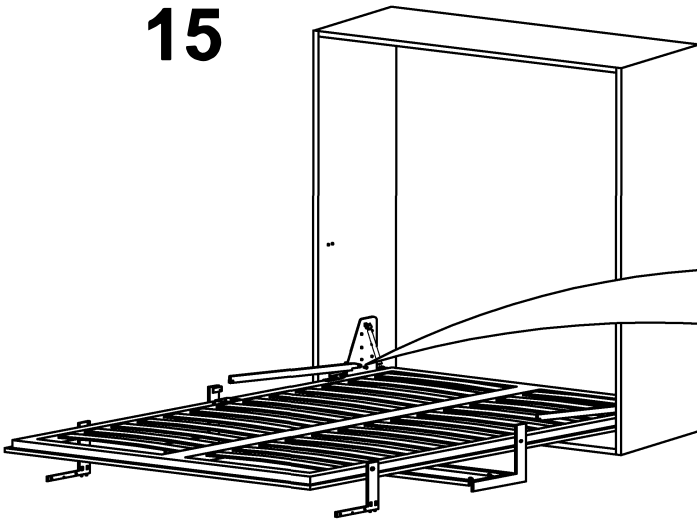


16


SAC DE VIS  
SCREWS  
BAG  
3  
AP1013

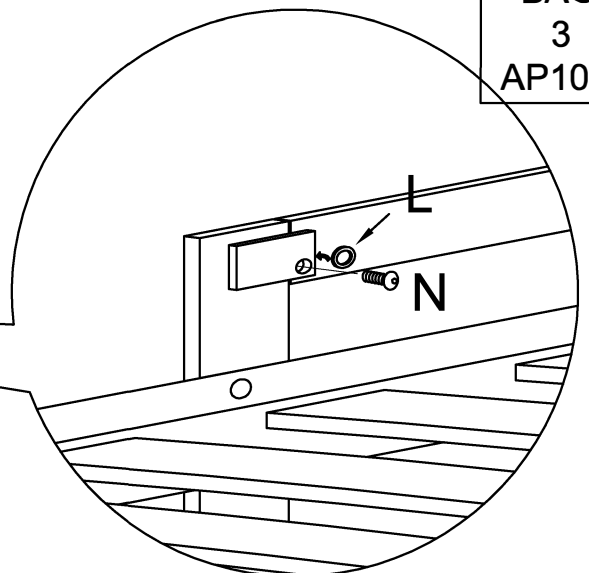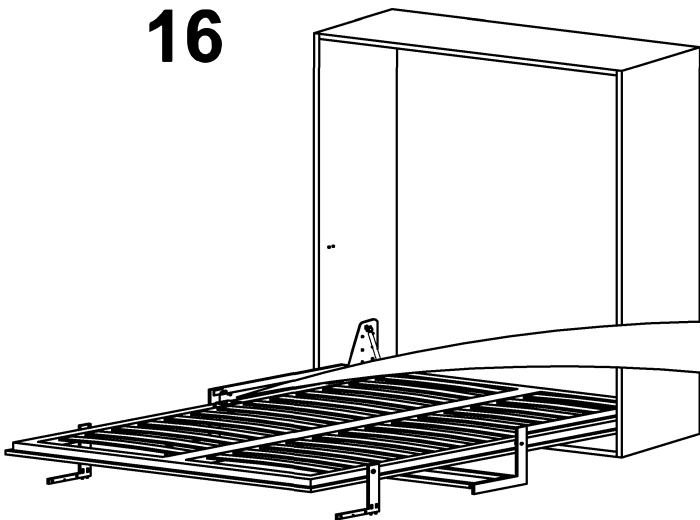


17

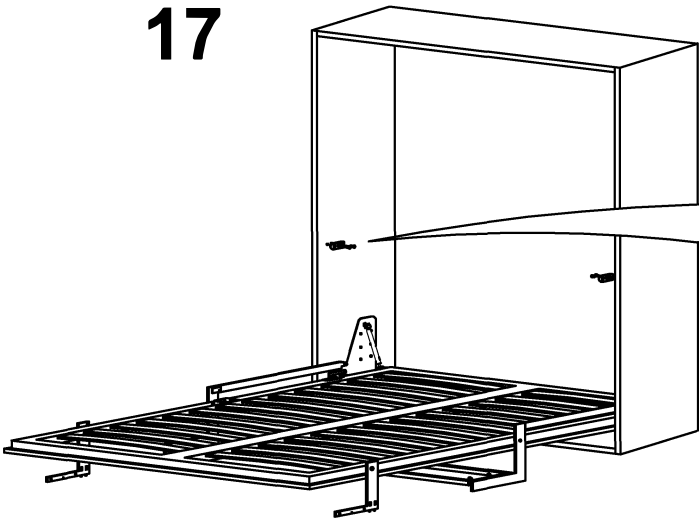

SAC DE VIS  
SCREWS  
BAG  
4  
AP1012

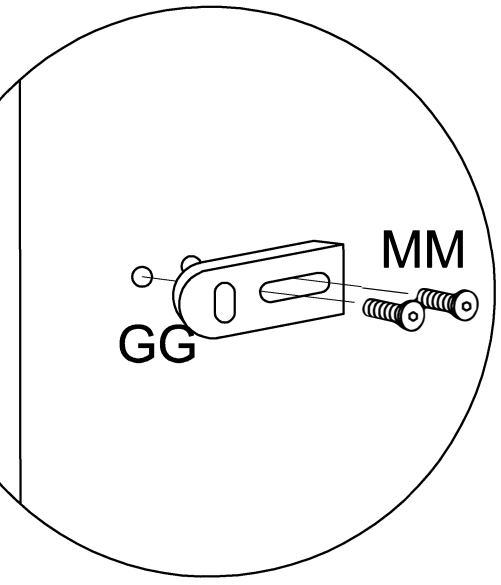


18


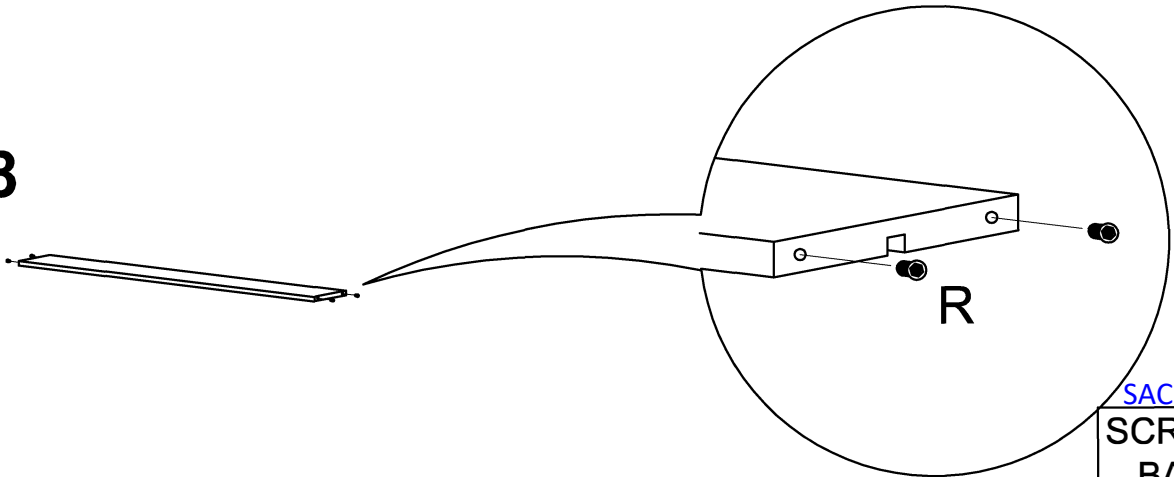


SAC DE VIS  
SCREWS  
BAG  
1  
AP1009

19


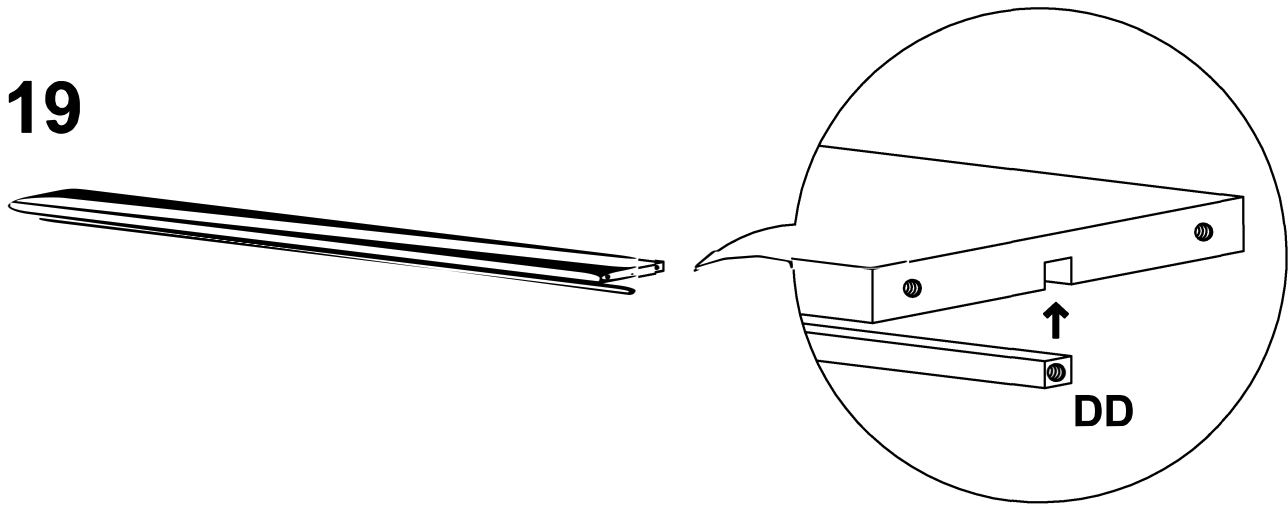


20

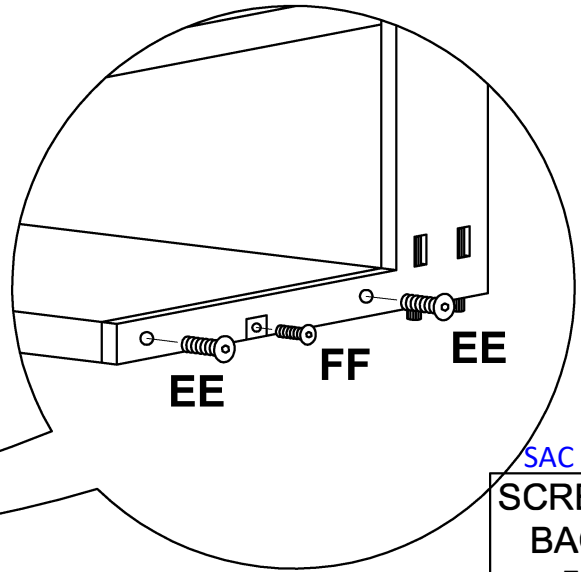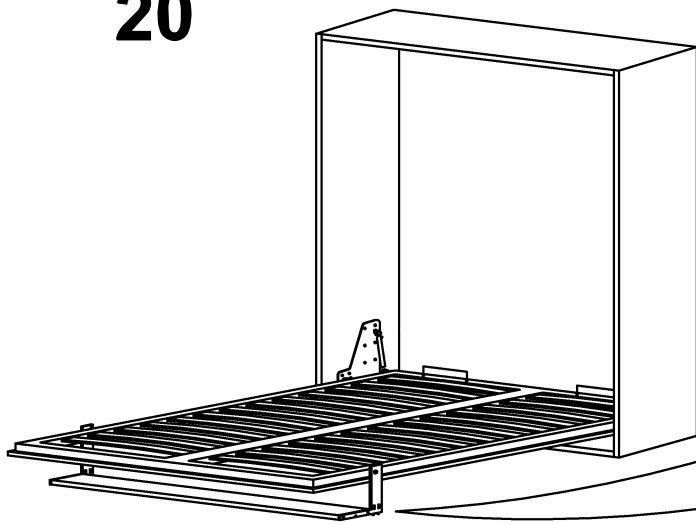

SAC DE VIS  
SCREWS  
BAG  
5  
AP1020

21

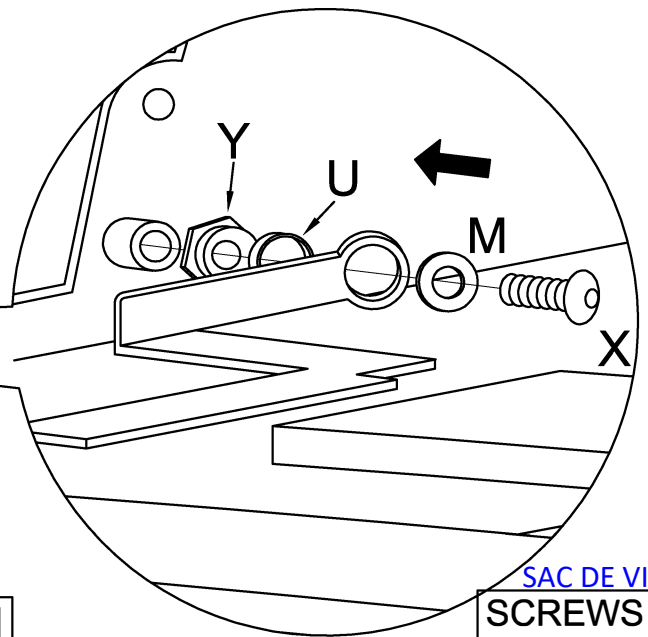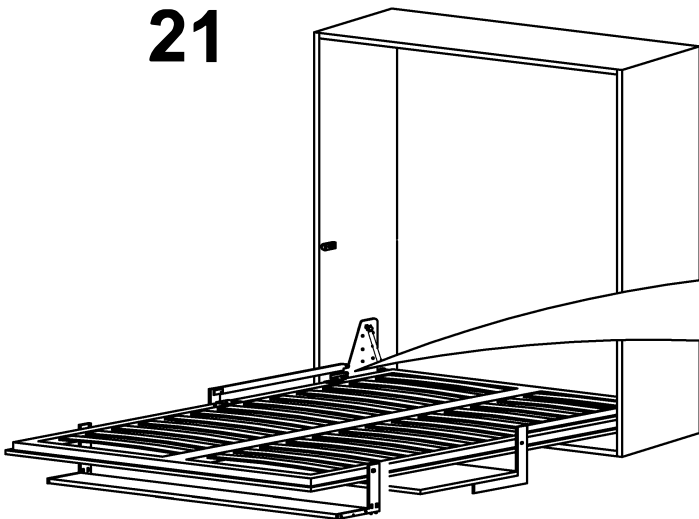

SAC DE VIS  
SCREWS  
BAG  
2  
AP1003

*CORRECT ADJUSTMENT*


- 1 OPEN THE BED
- 2 PUT THE FEET PARALLEL TO THE FLOOR
- 3 SET THE SCREW (X)

**AJUSTEMENT CORRECT**

- 1- OUVREZ LE LIT
- 2- METTES LES PATTES EN PARALLÈLE AU SOL
- 3- RÉGLER LA VIS (X)




22

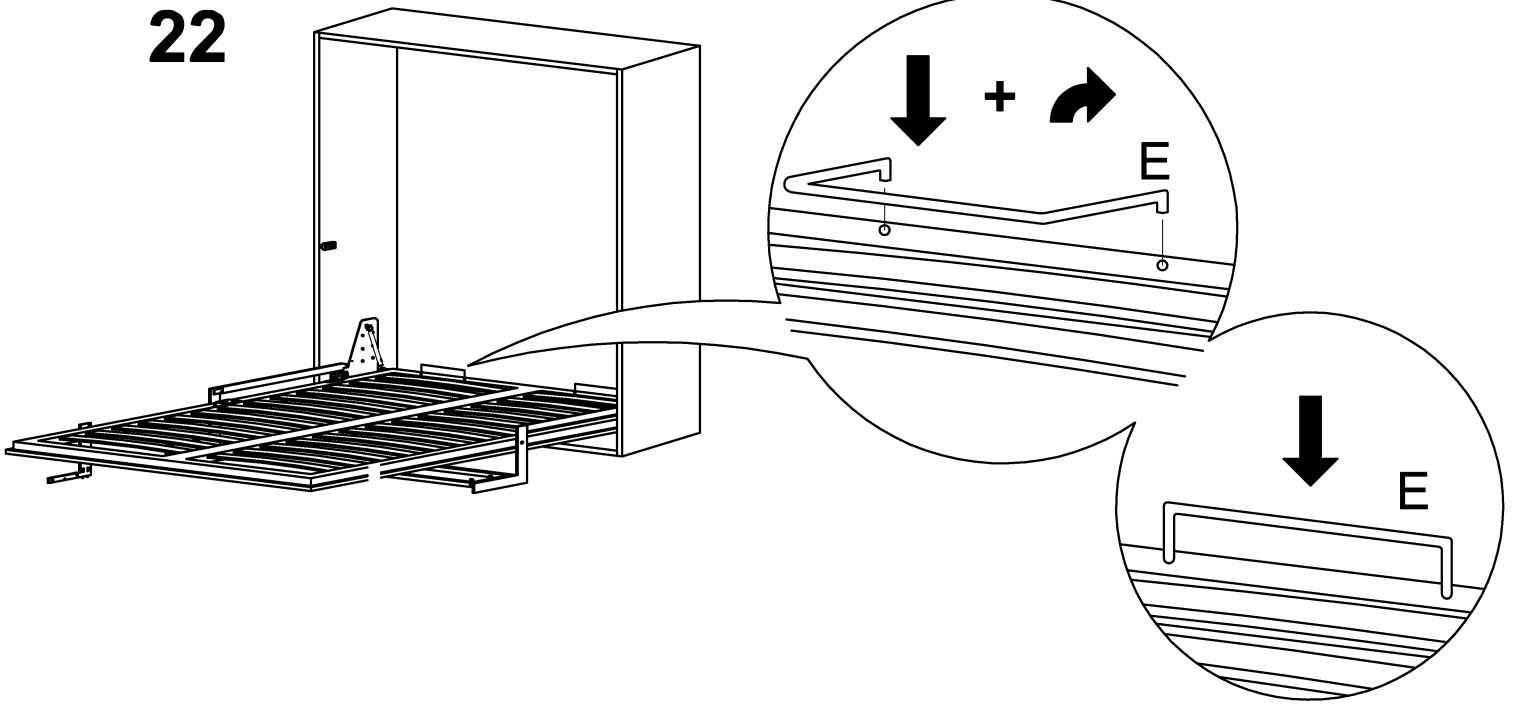


SAC DE VIS  
 SCREWS  
 BAG  
 2  
 AP1003

23

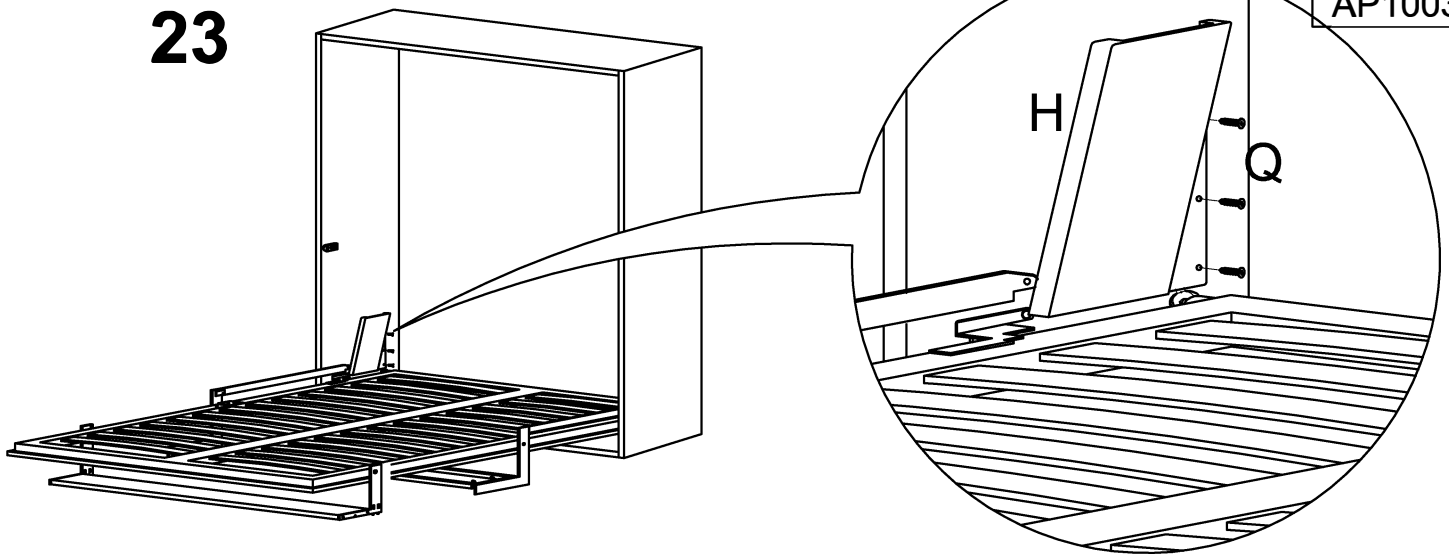


24

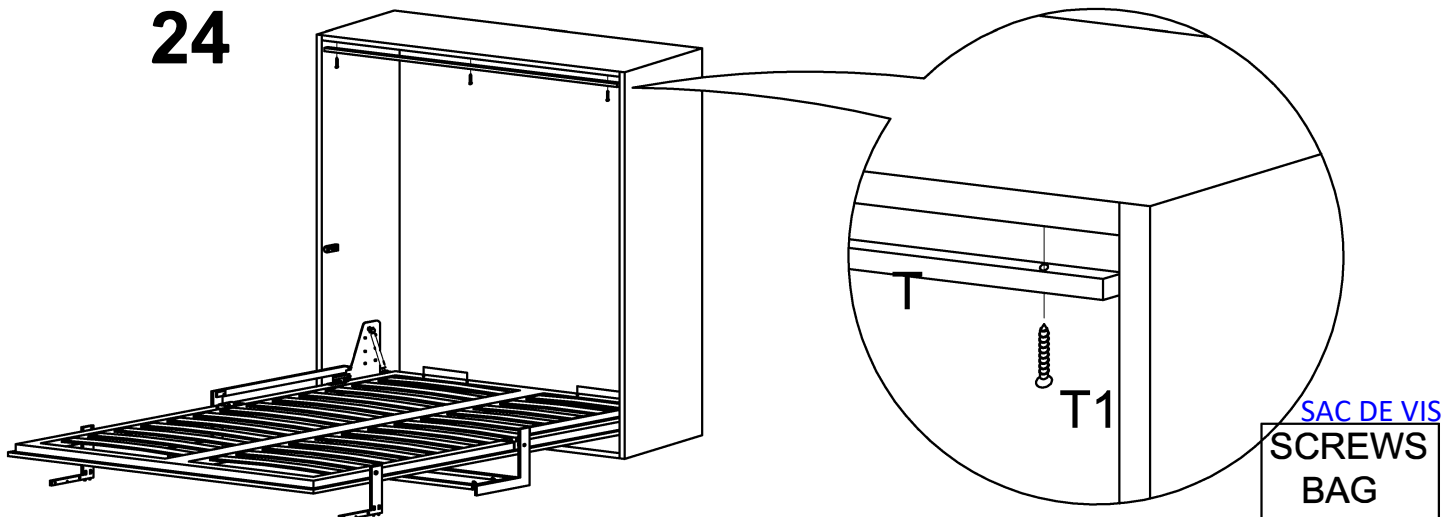

SAC DE VIS  
 SCREWS  
 BAG  
 A  
 AP1000




25

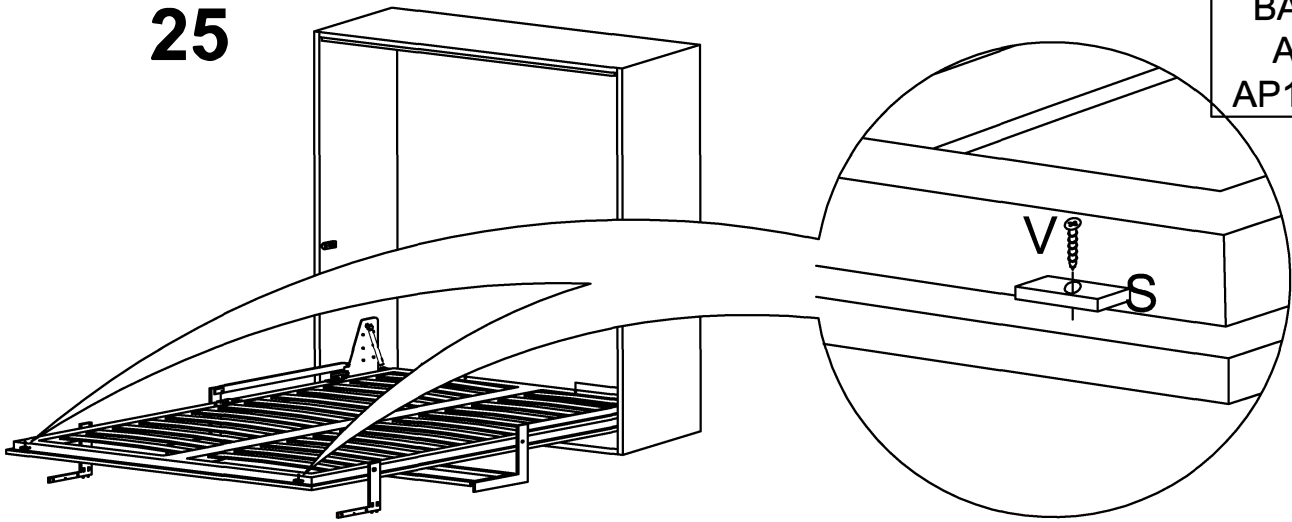

SAC DE VIS  
SCREWS  
BAG  
A  
AP1000

26

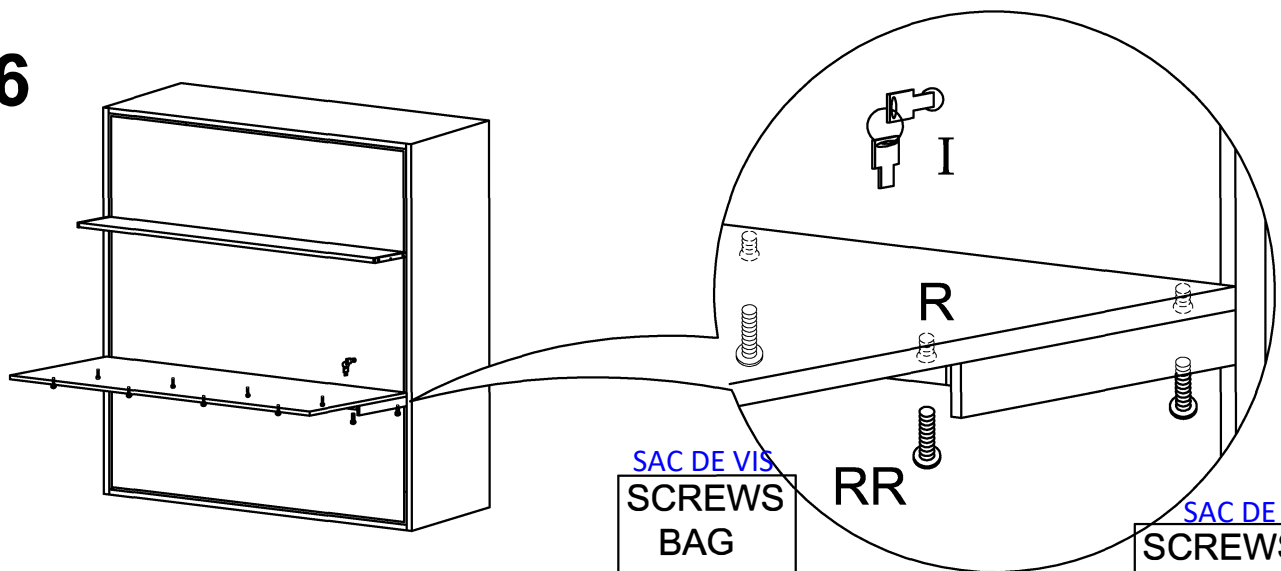

SAC DE VIS  
SCREWS  
BAG  
3  
AP1014

SAC DE VIS  
SCREWS  
BAG  
3  
AP1013

27

