


INTERIOR DUCTWORK KIT

90358100

To be used with blowers #
20390100 and 20250100

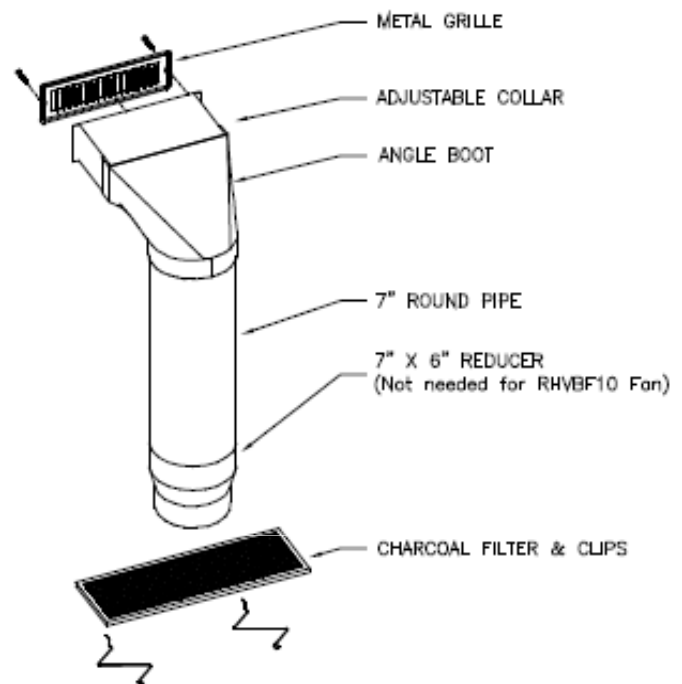

1. Install blower or fan in metal liner (sold separately) following instructions provided .
2. Install charcoal filter into blower or fan.
3. Place 6" end of reducer if needed, over the blower fan collar and secure in place.
4. Place the non-crimped end of the 7" round pipe over the reducer. Seal and secure.
5. Place angle boot over the crimped end of the round pipe. Seal & secure.
6. Trim adjustable collar to fit application.
7. Mark and cut 3" x 10" hole for the Metal Grille. Seal and secure collar to angle boot and position over existing hole.
8. Position metal grille on face of chimney or soffit and secure with screws provided.