


**OMEGA INDUSTRIES, INC. PLATE RACK  
#P1100-UF2  
INSTALLATION INSTRUCTIONS**

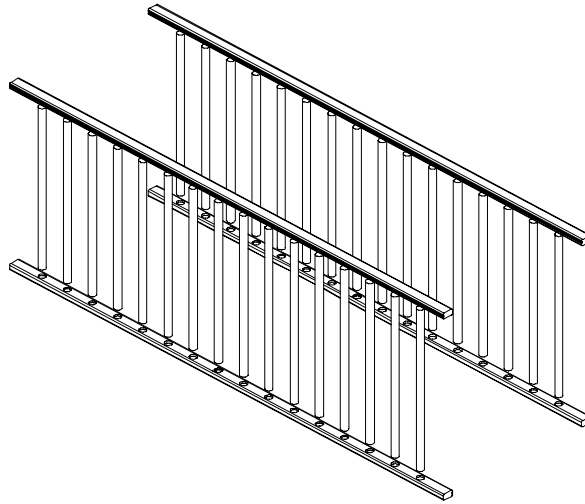

**Components:**

- (2) Top Rails, 34-3/8" with (16) 15/32 x 21/64" deep pre-drilled holes
- (2) Bottom Rails, 34-3/8" with (16) 15/32 x 21/64" shallow pre-drilled holes
- (32) Dowels, 7/16 x 12"

**Instructions:**

- Step 1: Measure inside width of cabinet. Trim top and bottom rails to fit. Be sure to trim equal amounts from both ends of each rail.
- Step 2: Measure inside height of cabinet. Subtract 5/8" from measurement. Trim the dowels to this measurement.
- Step 3: Select desired holes to be used for attaching rails. Drill 1/8" diameter pilot holes.
- Step 4: Determine the desired spacing between front and rear rails. Use a #6 flat head screw to fasten to the mounting surface. CAUTION: The length of the screw used must be long enough to securely fasten rail in place but not perforate exterior of the mounting surface.
- Step 5: Insert dowels into top holes and slide into position in corresponding bottom hole. Dowels may be removed in reverse order.



**Omega National**  
P R O D U C T S

1010 Rowe Street · Elkhart, IN USA 46516-5589  
Phone (574)295-5353 · Fax (574)523-0340  
[www.omeganationalproducts.com](http://www.omeganationalproducts.com)