

Required: FineLine LED Light Body P/N: LED-STK (2.4W/ft.)
DC Power Supply P/N: DC-ELT60-CON (60W)
Starter Cord, AMP Connector, Mounting U Clips and End Cap are included with each Light.
Mounting Block and Power Cord are included with each Power Supply.

Optional: See Accessories below.

Installation Instructions

FineLine LED Light Series

2.4W/ft. 12VDC

READ ALL INSTRUCTIONS BEFORE INSTALLING SYSTEM.

Before beginning installation, be sure power is turned OFF to light system.

To begin installation, roughly lay out lighting system to help verify final positioning of all components and cord lengths.

1. Install **60W DC Power Supply** with **Mounting Block** concealed from view. Do not plug Power Cord into 120V power source yet (see #1).
2. Determine exact position of Light Fixture(s). To install, use **(2) U Clips** (with screws provided). Drill 1.5mm (1/16") pilot holes for screws. Install U Clips, then snap Fixture into place (see #2).
3. Use a **Starter Cord** to link Mounting Block to first Light (see #3). See "Connecting Starter Cords" information below (†). If spacing is more than 2m (79"), an **Extension Cord** may be used.
Note: Maximum length of Starter Cords from Power Supply to light should not exceed 5m (16'). Longer cords could result in poor light quality.
4. Light Fixtures can be linked together using a **FineLine Link Cord** (see Accessories), or can be linked directly, light-to-light without a cord. (see #4)
Note: Maximum continuous run is 3.7m (12') to prevent voltage drop. Maximum 7.3m (24') per 60W Power Supply.
5. Cords can either: (a) feed through a hole in mounting surface (shelf); or (b) run along surface. **Starter Cord** only requires 5mm (3/16") hole (before AMP® Connector is attached). **Link Cord** requires 11mm (7/16") hole (see #5a & #5b).
6. Continue mounting Light Fixtures as needed, connecting light-to-light or using Link Cords. Place an **End Cap** at the end of each run (see #6). Additional light runs can be connected to the 6-Snap Mounting Block.
Note: Use insulated staples or plastic ties to secure all loose wires.
7. Finally, plug Power Cord into 120V power source.

(†) Connecting Starter Cords:

Starter Cords come with a male AMP® Connector unattached to help route wires through smaller holes if needed. To attach, push needle ends of Starter Cord wires into AMP® Connector until completely seated.
IMPORTANT! Make sure to match polarity (+) and (-) of the wires to the AMP® connector. See markings on wires and connector (see #7).

Required:

DC Power Supply 60W 12VDC (P/N: DC-ELT60-CON) – powers up to 7.3m (24') of light fixtures; maximum single continuous run should not exceed 3.7m (12'). Mounting Block and Power Cord are included with each Power Supply.

Starter Cord 2m (79"), **AMP® Connector**, **(2) Mounting U Clips**, and **End Cap** are included with each Light.

Accessories:

FineLine Link Cord (P/N: LED-STKLNK) – available in 5cm (2"), 15cm (6"), 25cm (10"), 60cm (24"), 120cm (48"), or 180cm (72") lengths.

Touch On/Off Switch, 200W (P/N: TS2-72) – Power Supply plugs into On/Off Switch. (see Touch On/Off Switch Installation Instructions).


Round Switch, 12V (P/N: RDSW) – plugs in between Mounting Block and Power Supply or Mounting Block and Starter Cord. (see Rocker Switch Installation Instructions).

Remote Control LED Dimmer, 12V (P/N: LED-DIMRMT-12V8A) – available in Dedicated Code or Universal Code models. Comes with (2) remote controls (see LED Dimmer Installation Instructions).

Manual Rotary Dimmer (P/N: LED-DIMCON) (see LED Manual Remote Dimmer Installation Instructions).

Magnet Switch Kits, AMP Connectors, and Extension Cords (used to lengthen Starter Cords only) are also available.

Save these instructions for future reference.
For technical assistance: 1-800-227-1171

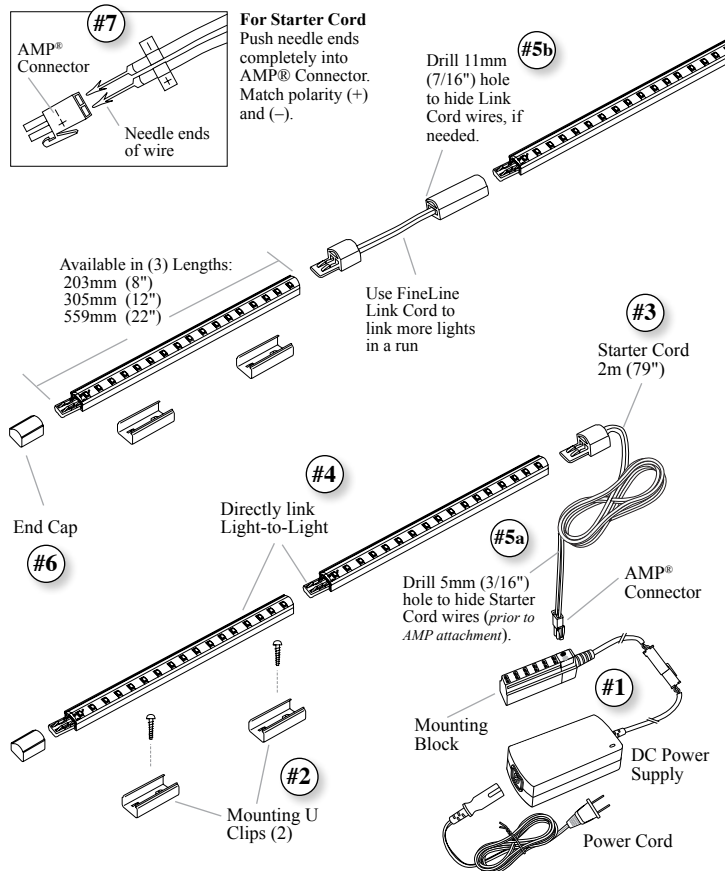

IMPORTANT SAFETY INSTRUCTIONS

CAUTION: To reduce the risk of fire, electric shock, or injury to persons:

- Tresco® 60W DC Power Supply powers up to 7.3m (24') of FineLine Lights; maximum single continuous run should not exceed 3.7m (12').
- LED lights are bright. Do not look directly at lights.
- Not intended for recessed installation in ceilings or soffits.
- Do not conceal 120V Power Supply Cord or power supply inside a wall, ceiling, soffit, or similar permanent structure, unless consulting a licensed electrician.
- Use only insulated staples or plastic ties to secure ALL loose cords.
- This portable lamp has a polarized plug on the Power Supply Cord (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug.

This light is intended to be used as a cabinet light on wood, particle board or other structurally sound, heat resistant surface. Care should be taken during and after installation to avoid contact of light with wiring, cord, or any combustible material.



Tresco International Ltd. Co.
801 E. Middletown Rd.
North Lima, Ohio USA 44452



Tel: 800-227-1171
Fax: 800-841-2523

Email: custsvc@trescointl.com
Web: www.trescointernational.com