onward

Assembly and Installation

CS Cavity Slider[™] CS TrackSystems CS FramelessGlass

These instructions cover the preparation of the **CS Frameless Glass Clamp System**. Fit glass to the clamp system by following the instructions below then refer to the installation instructions for the track you have purchased.

1. FITTING THE GLASS

Ensure glass clamp gaskets (supplied by CS) are in place on both sides of the clamp assembly as shown. The M8 bolts have been lubricated in preparation for the torque tightening.


Loosen off the M8 x 30 mm [1-3/16"] countersunk machine bolts enough to slide the glass into position so that the top edge is in the clamp. You may need to loosen the machine screws holding the mounting plate in place to do this.

Check notch position before hanging glass.

The wide notches on the clamp spacers must be orientated as shown to suit 3/8" [10 mm] thickness glass. Clamp spacers must be in line with bolts. Once in place, tighten the bolts off using a torque wrench to 27 Nm.


Re-tighten mounting plate screws.

Fit end cap(s) and bolt head cover extrusion if required. When the Full-Height detail option is chosen, these may be needed for aesthetic purposes. Use a mallet and block of wood when fitting bolt head cover extrusions to avoid denting the extrusions.

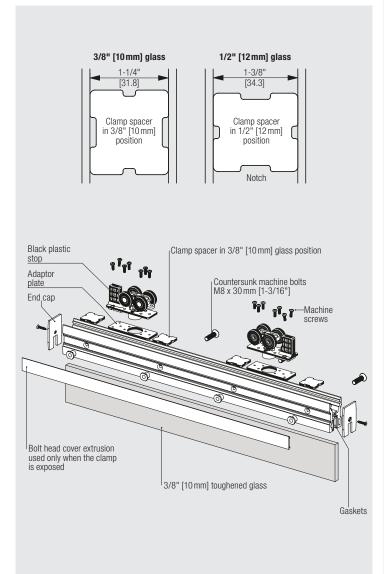

2. SUGGESTED ASSEMBLY DETAIL

Install and adjust your door as per the track installation instructions.

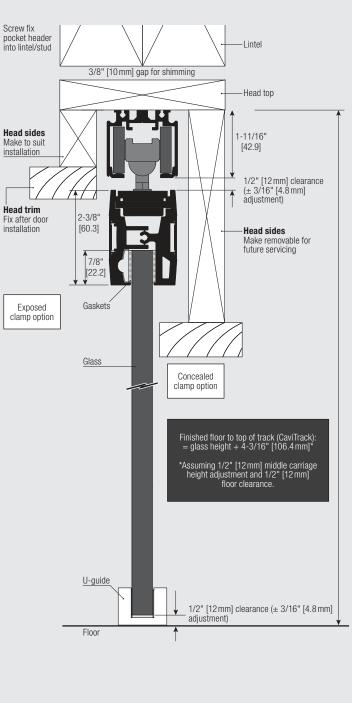

g CavitySliders^{**}

CS Cavity Slider[™], CS TrackSystems, CS FramelessGlass

3. MOUNTING PLATE POSITIONING

onward

