

A WARNING

WARNING


The Ascent warranty is voided if the product is modified in any way or the instructions for the product are not followed.

Read all instructions before installing and operating the **CBLIFT-0019.**

CAUTION!

• Do not operate the lift without attaching adequate counterbalance weights. See the weight matrix on the product technical sheet.

CABINET PREPARATION

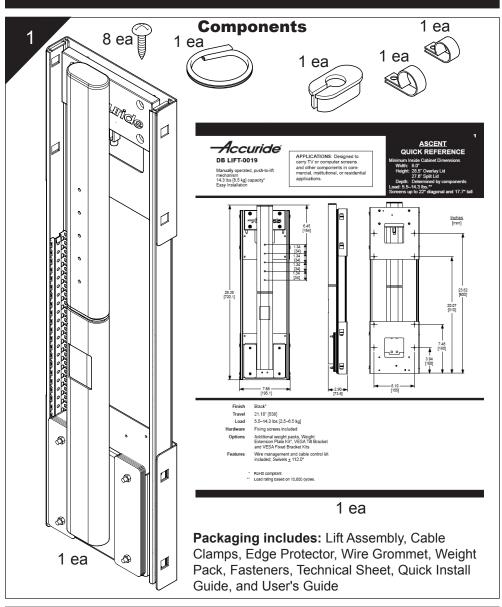

Cabinet Preparation

Minimum Inside Cabinet Dimensions


Width: 8.0" [200 mm]

Height: 28.5" [720 mm] Overlay Lid

27.6" [700 mm] Split Lid


Depth: Dimension Determined by components


NOTE: The minimum dimensions do not take into consideration the additional cabinet space required for screen width or depth.

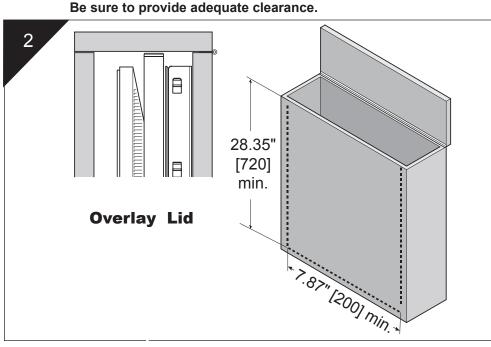

Ascent CB LIFT0019 QUICK INSTALLATION GUIDE


INSTALLATION PROCEDURE

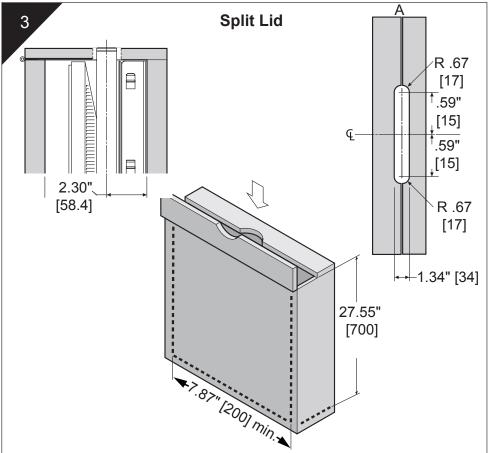


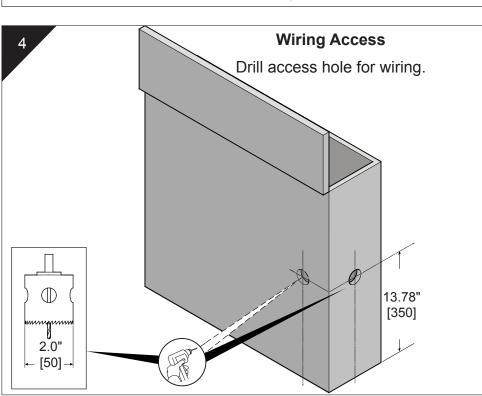



Lift Installation


Locate cabinet centerline. Mark and pre-drill mounting holes. Install six #6 X 10 screws.

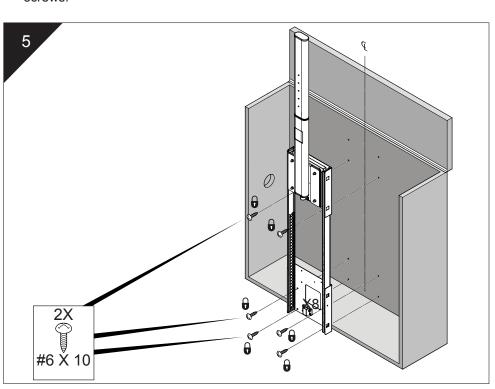

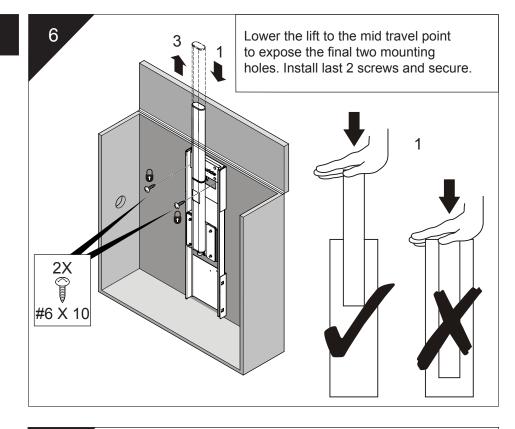


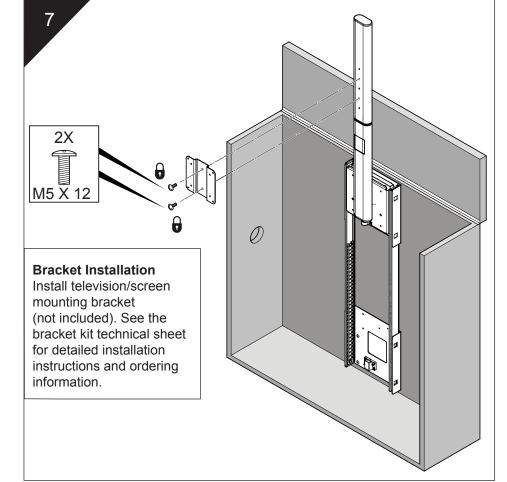

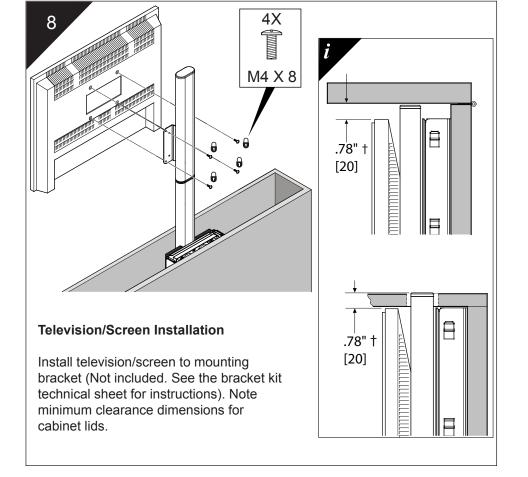

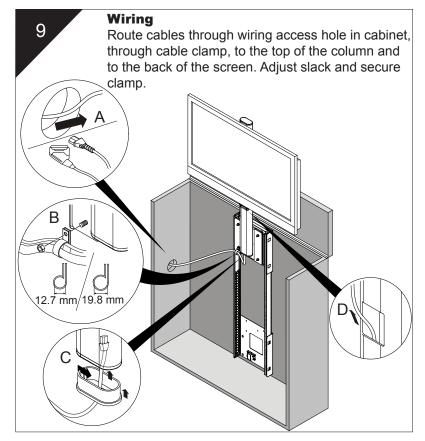

Install the edge protector.

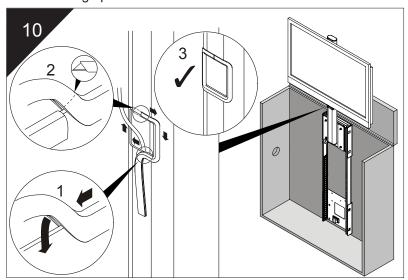

Counterbalance Weights

Weight plates are installed to counterbalance the weight of the


If more than two weight packs are required, order the Weight Extension Plate Kit (P/N 2990-9775-BE). See the technical sheet for weight pack recommendations and ordering

Important: Inadequate weight may cause the unit to lift too quickly. Too much weight will override the spring-action move-

	NO BRACKET	BRACKET	BRACKET
inimum Weight	6.61 lbs.	5.73 lbs.	5.51 lbs.
aximum Weight	14.5 lbs.	14.5 lbs.	14.5 lbs.

Installing Weights

Adjust weights by adding or removing one plate at a time to control movement. Fully close the lift and then press to release to test the counterbalancing.

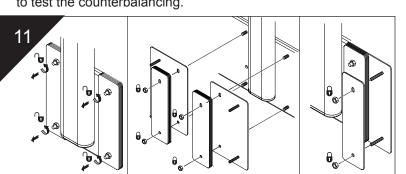

12311 Shoemaker Avenue

Santa Fe Springs, CA 90670

TEL (562) 903-0200 FAX (562) 903-0208 www.accuride.com

Manufacturing, Engineering, and Sales United States • Germany • Japan • Mexico • United Kingdom • China © 2009 Accuride International Inc. 3700-9529-(1217)-MK135-N-0809-PBA



Important Safety Information



WARNING

WARNING

The Ascent CBLIFT-0019 warranty is voided if the product is modified in any way or the instructions for the product are not followed.

Read all instructions before installing and operating the Ascent CBLIFT-0019.

Failure to read and follow the instructions can result in serious personal injury, damage to equipment, or voiding of factory warranty. It is the installer's responsibility to make sure all components are properly assembled and installed using the instructions provided.

Entrapment/Entanglement Hazard: When operating the Ascent, keep hands, clothing, and hair clear of the apparatus to prevent personal injury or damage to the mechanism.

CAUTION!

- The Ascent Lift is under strong spring force and must be transported in the open position.
- The Ascent Lift must be securely attached to the cabinet/ structure walls and made stable to carry the intended load when operated.
- The Ascent Lift is designed for vertical use only.
- Do not operate the lift without attaching adequate counterbalance weights. See the weight matrix.